

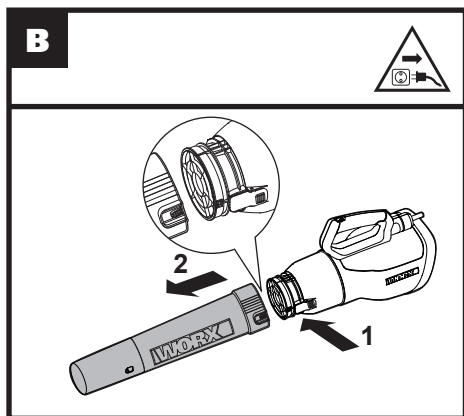
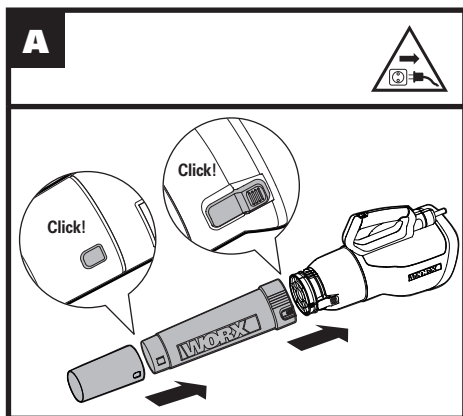
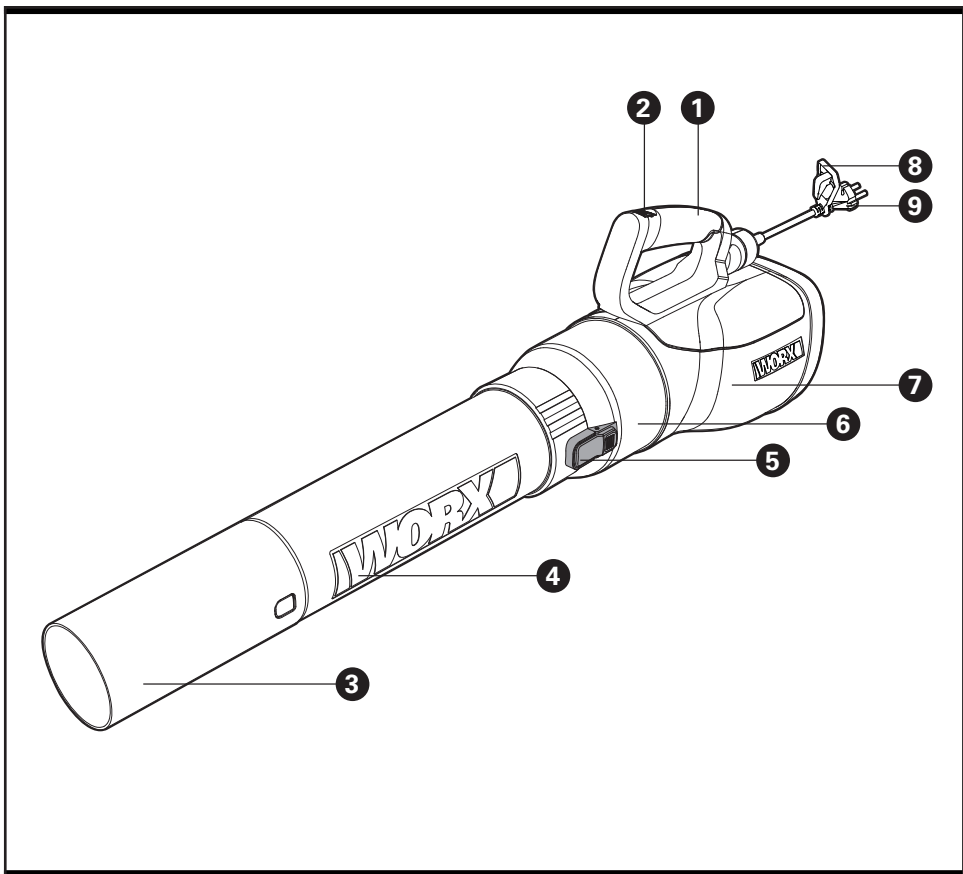
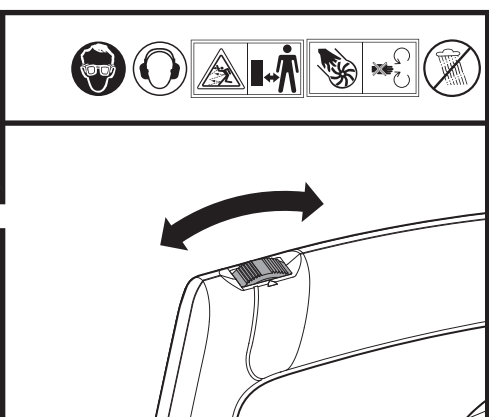


Electric Blower
מפוח חשמלי

WG518E

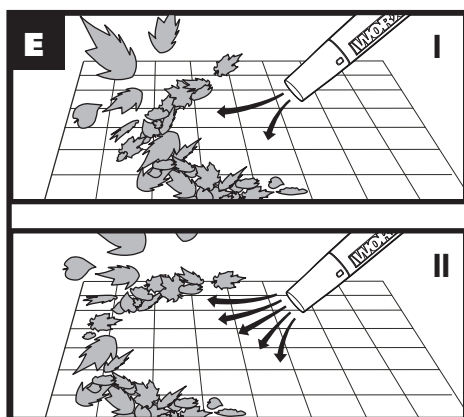

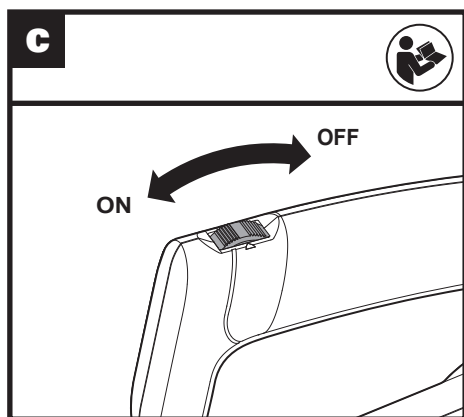

PRODUCT SAFETY

GENERAL SAFETY WARNINGS



WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: To reduce the risk of injury, user must read and understand instruction manual.

1) Training

- a) read the instructions carefully. Be familiar with the controls and the proper use of the appliance;

- b) never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator;
- c) never operate the appliance while people, especially children, or pets are nearby;
- d) The operator or user is responsible for accidents or hazards occurring to other people or their property.

2) Preparation

- a) While operating the appliance, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;
- b) Do not wear loose clothing or jewellery that can be drawn into the air inlet. Keep long hair away from the air inlets.
- c) Wear protective goggles while operating
- d) To prevent dust irritation the wearing of a face mask is recommended
- e) Before using, check the supply and extension cord for signs of damage and aging. Do not use the appliance if the cord is damaged or worn.
- f) Never operate the appliance with defective guards or shields, or without safety devices
- g) Only use a weather proof extension cable fitted with a coupler according to IEC 60320-2-3.

- h) The appliance should be supplied via a residual current device (RCD) with a tripping current of not more than 30 mA is recommended.
- i) if an extension cord is used make sure it is for outdoor use and marked as such. The recommended size of extension cord is not lighter than $2 \times 0.75 \text{ mm}^2$.

3) Operation

- a) Always direct the cable to the rear away from the appliance.
- b) If the cord becomes damaged during use, disconnect the supply cord from the mains immediately. **DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.**
- c) Do not carry the appliance by the cable.
- d) Disconnect the appliance from the mains supply
 - whenever you leave the machine;
 - before clearing a blockage;
 - before checking, cleaning or working on the appliance;
 - if the appliance starts to vibrate abnormally.
- e) Operate the appliance only in daylight or in good artificial light.
- f) Do not overreach and keep your balance at all times.
- g) Always be sure of your footing on slopes.
- h) walk, never run;
- i) Keep all cooling air inlets clear of debris.

- j) Never blow debris in the direction of bystanders.
- k) do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times;
- l) never pick up or carry the appliance while the engine is running;

4) Maintenance and storage

- a) keep all nuts, bolts and screws tight to be sure the appliance is in safe working condition;
- b) Replace worn or damaged parts.
- c) Use only genuine replacement parts and accessories.
- d) Store the appliance only in a dry place.

SYMBOLS

	WARNING: Read the operator's manual.
	Wear eye protection
	Wear ear protection
	Double insulation
	Disconnect the mains plug if the cord becomes damaged or entangled.
	SWITCH OFF: Remove plug from mains before cleaning or maintenance.
	Keep bystanders away
	Warning of hazard
	Do not use in the rain or leave outdoors while it is raining.

1. HANDLE

2. ON/OFF SWITCH (VARIABLE SPEED CONTROL)

3. LOWER BLOWER TUBE

4. UPPER BLOWER TUBE

5. TUBE RELEASE BUTTON

6. FAN HOUSING

7. MOTOR HOUSING

Not all the accessories illustrated or described are included in standard delivery.

TECHNICAL DATA

Type Designation:	WG518E
Rated Voltage	220-240V~50/60Hz
Rated power	2500W
No load speed	26500/min
Blower speed	97km/h-177km/h
Blowing capacity	9.1m³/min-16.7m³/min
Machine weight	2.8kg
Protection degree	

We recommend that you purchase your accessories listed in the above list from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATION

INTENDED USE:

The blower is intended for residential use only. Use the blower outdoors to move yard debris as needed.

ASSEMBLY AND OPERATION

ACTION	FIGURE
Assembling & disassembling the Blower Tube	See Fig. A&B
Starting & Stopping  WARNING: The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.	See Fig. C
Using the Blower Hold the blow tube approximately 8–20cm above the ground when operating the tool. Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you. After blowing the debris/leaves into a pile, it is easy to dispose of the pile. CAUTION! —Do not blow hard objects such as nails, bolts, or rocks. —Do not operate the blower near bystanders or pets. —Use extra care when cleaning debris from stairs or other tight areas. —Wear safety goggles or other suitable eye protection, long pants and shoes.	See Fig. D
Adjusting the Blowing Speed Variable Speed Switch	See Fig. E

STORAGE

Store the blower and extension cord indoors, in a cool dry location, out of reach of children and animals.

CLEANING THE TOOL

Clean the tool regularly.

-  **WARNING!** Keep your product dry. Under no circumstances spray with water.
- To clean the tool, use only mild soap and a damp cloth.
 - Do not use any type of detergent, cleaner or solvent which may contain chemicals that could

seriously damage the plastic.
—Self lubricating bearings are used in your product, therefore lubrication is not required.

ENVIRONMENTAL PROTECTION



Disposal

The machine, its accessories and packaging materials should be sorted for environmentally friendly recycling.

The plastic components are labeled for categorized recycling.

הוראות תפעול

מטרת השימוש:

המפוח מיועד לשימוש אך ורק באזורי מגורים. יש להשתמש במפוח בחוק לסילוק פסולת על פי הצורך.

הרכבה והפעלה

הגנת הסביבה

השלכה

יש למיין את המכונה, האביזרים וחומרי האריזה למיחזור ידידותי לסביבה.
רכיבי הפלסטיק מסומנים למיחזור לפי קטגוריות.



פעולה	איור
הרכבת צינור המפוח ופירוקו	ראה איורים B ו-A
הפעלה/כיבוי אזהרה! הכלי ממשיך לפעול למשך מספר שניות לאחר כיבוי. הניחו למנוע להגיע לעצירה מלאה לפני שתניחו את הכלי.	ראה איורים C
שימוש במפוח שמרו על מרווח של כ-180 מ"מ בין קצה הפייה והקרקע בעת השימוש במפוח. הניעו את המפוח מצד לצד. התקדמו באיטיות תוך שמירה על ערימת העלים/הלכלוך לפניכם. כך יהיה לכם קל יותר להשליך אותה לאשפה בגמר העבודה. זהירות! • אל תנשפו חפצים קשים כגון מסמרים, ברגים או אבנים. • אל תפעילו את המפוח בקרבת עוברי אורח או חיות מחמד. • ינקטו משנה זהירות בעת פינוי לכלוך ממדרגות או ממקומות צרים אחרים. • ילבשו משקפי מגן או ציוד מגן אחר לעיניים, מכנסיים ארוכים ונעלי עבודה.	ראה איורים D
כוונון מפסק המהירות המשתנה של מהירות משב הרוח	ראה איורים E

3

אחסון

יש לאחסן את המפוח ואת הכבל המאריך בתוך מבנה, במקום יבש וקריר, הרחק מילדים ובעלי חיים.

ניקוי המכשיר

נקו את המפוח בקביעות.



- אזהרה!** שמרו על המפוח יבש. לעולם אל תתזו עליו מים.
- השתמשו במטלית רכה טובלה במעט תמיסת מים ונזול לניקוי כלים, לניקוי המפוח.
 - לעולם אל תשתמשו בדטרגנטים, בתכשירי ניקוי או בממסים העלולים להכיל כימיקלים הפוגעים בחלקי הפלסטיק.
 - המסכים במפוח הם בעלי יכולת שימון עצמי, לכן המפוח אינו מצריך שימון.



שם החברה: סמיקום לקסיס בע"מ
כתובת: א"ת מערבי קדימה ת.ד. 9090 אבן יהודה
טלפון: 09-7611222
www.semicom.co.il

	אזהרה! יש לקרוא את המדריך למשתמש.
	ש להרכיב מגני עיניים
	יש להרכיב מגני אוזניים
	בידוד כפול
	נתקו את התקע מהשקע לפני כוונון, ניקוי, או כשכבל הזינה מסתבך או פגום.
	כיבוי: יש לנתק את התקע מהחשמל לפני פעולות ניקוי או תחזוקה.
	יש להרחיק עוברי אורח .
	אזהרה מפני סכנות
	אין להשתמש במוצר בגשם או להשאירו בחוץ כאשר יורד גשם.

1. ידית
2. מתג הפעלה/כיבוי) כפתור בורר מהירות)
3. צינור מפוח תחתון
4. צינור מפוח עליון
5. לחצן שחרור הפייה
6. תושבת המאוורר
7. בית המנוע

חלק מהאביזרים המוצגים בחוברת זו או המתוארים בה הם אופציונליים וניתנים לרכישה בנפרד.

נתונים טכניים

WG518E	סוג
220-240V~50/60Hz	'וולטאג
2500W	הספק כוח
26500/דקה	מהירות ללא עומס
97-177 קמ"ש	מהירות אוויר
16.7 מ"מ/דקה-9.1 מ"מ/דקה	תפוקת אוויר
2.8 ק"ג	משקל המכשיר
□/	רמת הגנה

מומלץ לרכוש את האביזרים מאותה חנות בה רכשתם את הכלי. בחרו את הסוג בהתאם לפעולת העיבוד אותה אתם עומדים לבצע. עיינו בהוראות על גבי אריזת האביזר למידע נוסף. צוות החנות יכול לסייע ולייעץ לכ

הוראות בטיחות כלליות



אזהרה יש לקרוא את כל האזהרות וההוראות. אי ציות לאזהרות או להוראות עלול לגרום להתחשמלות, לשריפה ו/או לפציעה חמורה.
יש לשמור את כל האזהרות וההוראות להתייחסות עתידית.

- מכשיר זה אינו מיועד לשימוש על ידי אנשים בעלי לקויות פיזיות, תחושתיות או מנטליות (כולל ילדים), או חסרי ניסיון וידע, למעט תחת השגחה או עם הדרכה של אדם האחראי לבטיחותם בכל הנוגע לשימוש.
- כדי לוודא שילדים לא ישחקו במכשיר עליהם להיות תחת השגחה.
- במקרה של כבל חשמל פגום יש ללאוג להחלפתו על ידי היצרן, סוכן השירות או אדם מורשה אחר, כדי למנוע סכנה.



אזהרה: יש לקרוא ולהבין את חוברת ההוראות, לצמצום סכנת פציעה.

- (ה) יש להפעיל את המכשיר רק לאור יום או בתנאי תאורה טובים.
- (ו) אין להושיט ידיים רחוק ויש לשמור על שיווי משקל בכל עת.
- (ז) יש לוודא אחיזת הרגליים יציבה בקרקע במדרונות.
- (ח) יש ללכת, ולעולם לא לרוץ;
- (ט) יש לשמור על כל פתחי קירור האוויר כאשר הם נקיים מכל פסולת.
- (י) לעולם אין להעפף את הפסולת לעבר עוברי אורח.
- (יא) אין להניח ידיים או רגליים בקרבת חלקים מסתובבים או מתחתיהם. השאר את פתח הסילוק פנוי בכל עת;
- (יב) בשום פנים ואופן אין להרים או לשאת את המכשיר בזמן שהמנוע פועל;
- (4) תחזוקה ואחסון
- (א) יש להחזיק את כל הברגים, הבריחים והאומים כאשר הם מהודקים כדי להבטיח שהמכשיר בטוח לעבודה.
- (ב) יש להחליף חלקים פגומים.
- (ג) יש להשתמש רק בחלקי חילוף ואביזרים מקוריים.
- (ד) יש לאחסן את המכשיר רק במקום יבש.

- (1) הדרכה
- (א) יש לקרוא את ההוראות בזהירות. יש ללמוד להכיר את הבקורות והשימוש הנכון במכשיר;
- (ב) אין לאפשר שימוש במכשיר על ידי אנשים שאינם מכירים ההוראות שימוש אלו. תקנות מקומיות עשויות להגביל את גיל המפעיל;
- (ג) אין להפעיל את המכשיר בקרבת אנשים, בעיקר ילדים וחיות מחמד;
- (ד) על המפעיל או המשתמש חלה אחריות לתאונות או לסכנות הנגרמות לאנשים אחרים בשטח.
- (2) הכנה
- (א) בעת הפעלת המכשיר, יש ללבוש תמיד מכנסיים ארוכים ונעליים מתאימות לעבודה. אין להפעיל את המכשיר יחפים או בסנדלים;
- (ב) אין ללבוש בגדים רחבים או לענוד תכשיטים מחשש לשאיבתם לפתח שאיבת האוויר. יש להרחיק שיער ארוך מפתח האוויר.
- (ג) יש להרכיב משקפי מגן בעת הפעלת המכשיר.
- (ד) מומלץ לחבוש מסיכת פנים למניעת גירוי אבק.
- (ה) לפני שימוש, יש לבדוק את הכבל החשמלי המארך מחשש לנזקים ובלאי. אין להשתמש במכשיר אם הכבל פגום או שחוק.
- (ו) אין להפעיל את המכשיר עם מגנים או סוככים פגומים, או ללא אביזרי בטיחות.
- (ז) יש להשתמש אך ורק בכבל חשמלי עמיד לתנאי מזג אוויר קשים המצויד בתקע על פי IEC 60320-2-3.
- (ח) מומלץ לספק כוח למכשיר באמצעות מפסק RCD בעל זרם מפסיק שאינו עולה על 30 mA.
- (ט) אם אתה משתמש בכבל מאריך, ודא שהוא נועד לשימוש מחוץ לבית ומסומן ככזה. הגודל המומלץ של הכבל המארך לא יהיה קטן מ- 0.75x2 מ"ר.

- (3) תפעול
- (א) יש לכוון את הכבל לאחור, הרחק מהמכשיר.
- (ב) במקרה של נזק לכבל בעת השימוש, יש לנתקו מהחשמל באופן מיידי. אין לנגוע בכבל לפני ניתוקו מהחשמל, אין לשאת את המכשיר באמצעות הכבל.
- (ג) יש לנתק את המכשיר מהחשמל
- (ד) בכל פעם בה עוזבים את המכשיר;
- לפני ניקוי סתימה;
- לפני בדיקה, ניקוי או עבודה על המכשיר;
- אם המכשיר מתחיל לרטוט באופן חריג.



www.worx.com

Copyright © 2019, Positec. All Rights Reserved.
AR01462500