








LEAFJET






20V Cordless Blower

מפוח אלחוטי 20 וולט

WG543E WG543E.9

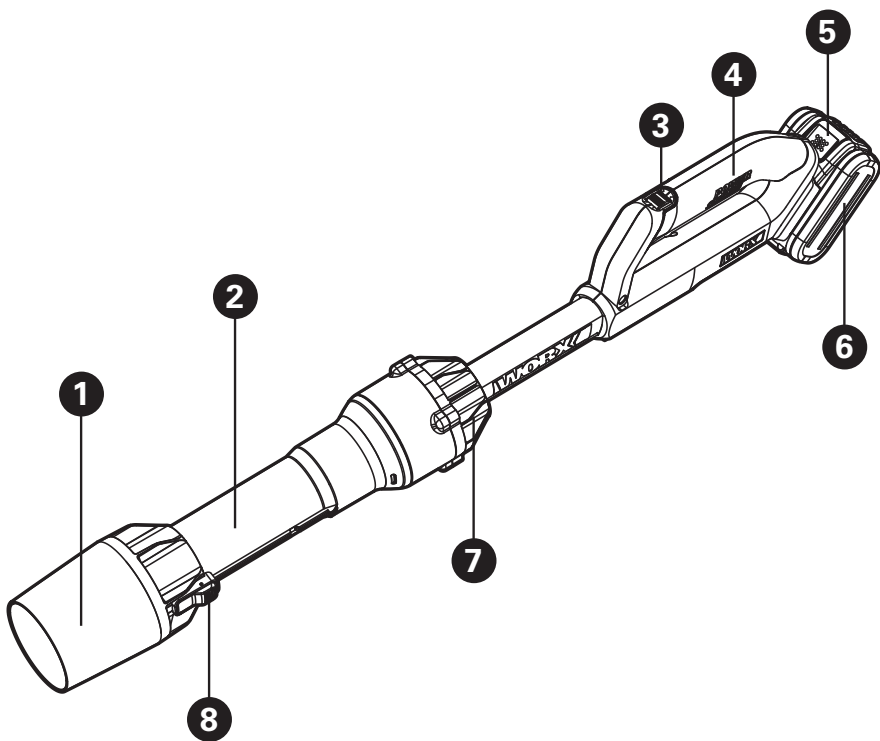

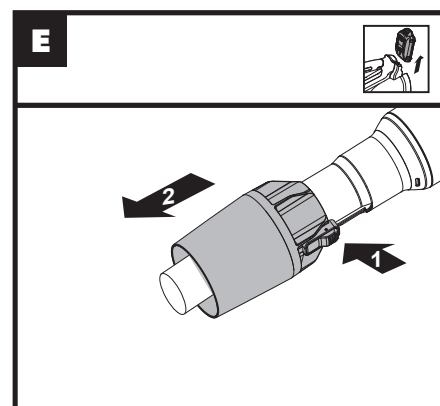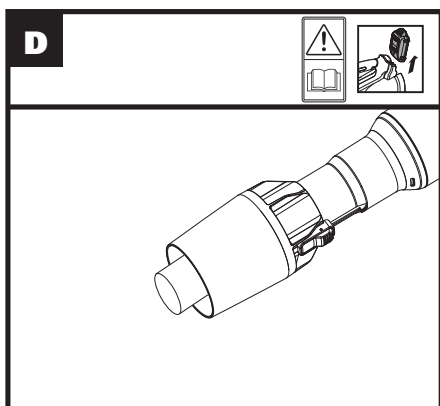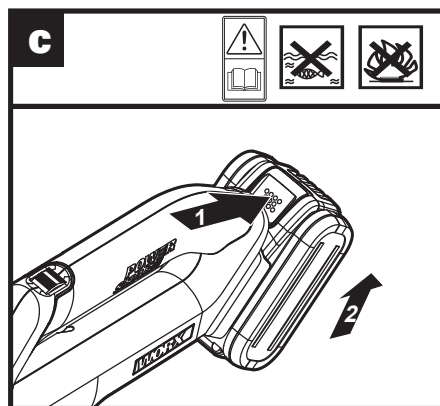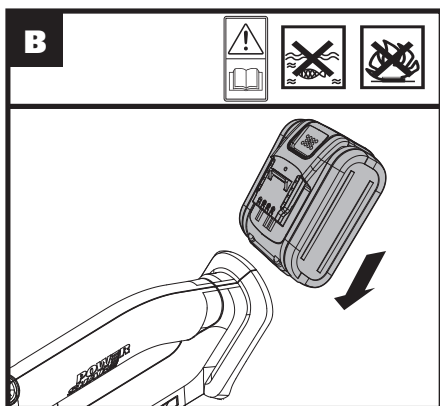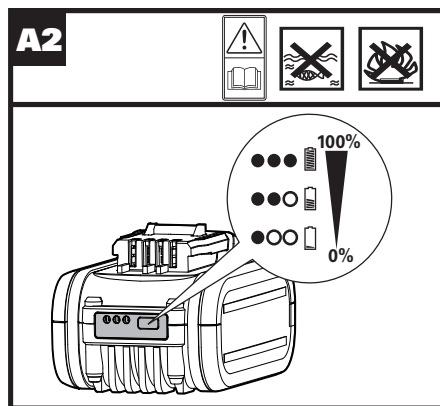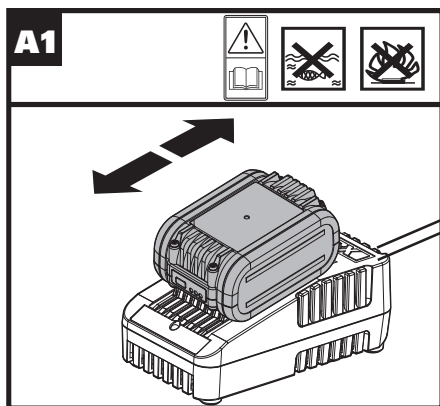

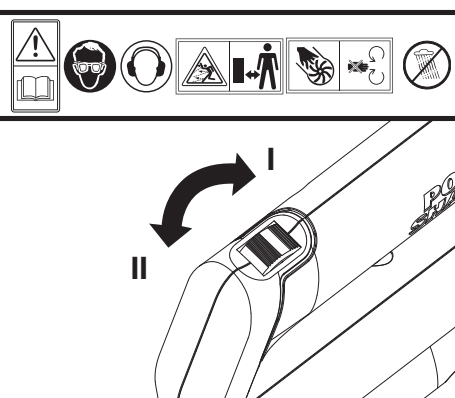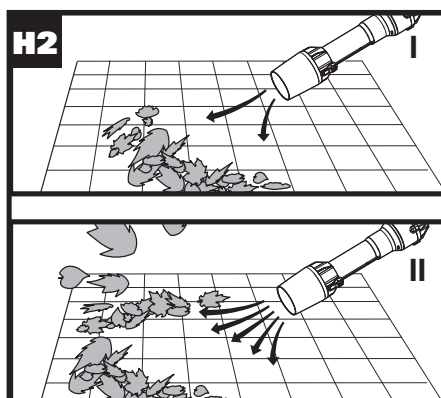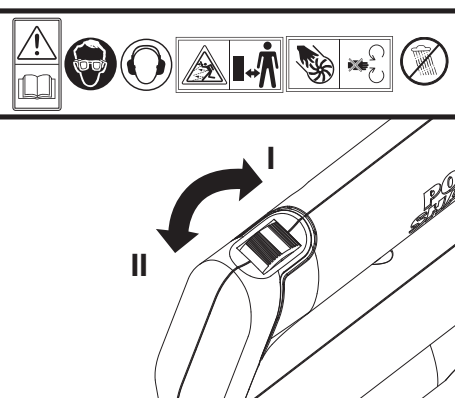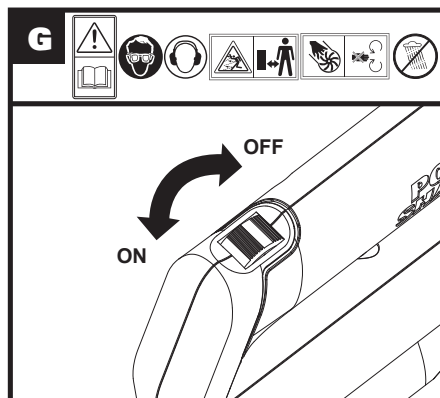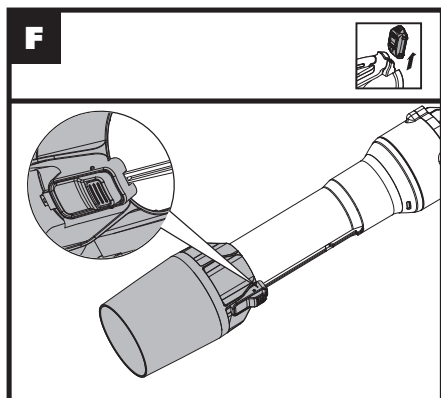

GENERAL SAFETY WARNINGS



WARNING Read all safety warnings and all instructions. Failure to follow the warnings

and instructions may result in electric shock, fire and/or serious injury.

Carefully read the instructions for the safe operation of the machine.

Save all warnings and instructions for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.

1) Training

- a) Read the instructions carefully. Be familiar with the controls and the proper use of the appliance;
- b) Never allow children to use the appliance;
- c) Never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator;
- d) Never operate the appliance while people, especially children, or pets are nearby;
- e) The operator or user is responsible for accidents or hazards occurring to other people or their property.

2) Preparation

- a) While operating the appliance, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;
- b) Do not wear loose clothing or jewellery that can be drawn into the air inlet. Keep long hair away from the air inlets;
- c) Wear protective goggles while operating;
- d) To prevent dust irritation the wearing of a face mask is recommended;
- e) Never operate the appliance with defective guards or shields, or without safety devices, for example debris collector in place.

3) Operation

- a) Remove the battery pack from the appliance
 - whenever you leave the machine;
 - before clearing a blockage;
 - before checking, cleaning or working on the appliance;
 - if the appliance starts to vibrate abnormally.
- b) Operate the appliance only in daylight or in good artificial light.
- c) Do not overreach and keep your balance at all times.
- d) Always be sure of your footing on slopes.
- e) walk, never run.
- f) Keep all cooling air inlets clear of debris.
- g) Never blow debris in the direction of bystanders.

4) Maintenance and storage

- a) keep all nuts, bolts and screws tight to be sure the

appliance is in safe working condition;

- b) Replace worn or damaged parts;
- c) Use only genuine replacement parts and accessories;
- d) Store the appliance only in a dry place.

SAFETY WARNINGS FOR BATTERY PACK

- a) **Do not dismantle, open or shred cells or battery pack.**
- b) **Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- c) **Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject battery pack to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) **Seek medical advice immediately if a cell or battery pack has been swallowed.**
- g) **Keep battery pack clean and dry.**
- h) **Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- i) **Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- j) **Do not maintain battery pack on charge when not in use.**
- k) **After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- l) **Battery pack gives its best performance when it is operated at normal room temperature (20 °C ± 5 °C).**
- m) **When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.**
- n) **Recharge only with the charger specified by Worx. Do not use any charger other than that specifically provided for use with the equipment.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- o) **Do not use any battery pack which is not designed for use with the equipment.**
- p) **Keep battery pack out of the reach of children.**
- q) **Retain the original product literature for future reference.**
- r) **Remove the battery from the equipment when not in use.**

- s) **Dispose of properly.**
- t) **Do not mix cells of different manufacture, capacity, size or type within a device.**
- u) **Do not remove battery pack from its original packaging until required for use.**
- v) **Observe the plus (+) and minus (–) marks on the battery and ensure correct use.**

SYMBOLS

	Warning!
	Read operator's manual
	Wear eye protection
	Wear ear protection
	Keep bystanders away.
	Warning of hazard
	Do not use in the rain or leave outdoors while it is raining.
	Remove battery from the socket before carrying out any adjustment, servicing or maintenance.
	Li-Ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.

	Do not burn
	Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.

COMPONENT LIST

1. AIRSPEED SELECTOR NOZZLE
2. BLOWER TUBE
3. ON/OFF SWITCH
4. HANDLE
5. BATTERY PACK RELEASE BUTTON *
6. BATTERY PACK *
7. MOTOR HOUSING
8. NOZZLE RELEASE BUTTON

* Not all the accessories illustrated or described are included in standard delivery.

TECHNICAL DATA

	WG543E	WG543E.9
Voltage	20 V Max.**	
Maximum air volume	I: 518 m³/h II: 696 m³/h (Air volume mode)	
Maximum air velocity	I: 153 km/h II: 209 km/h (Air speed mode)	
Charging time	2 hrs (approx.)	/
Machine weight	1.7 kg	1.1 kg

** Voltage measured without workload. Initial battery voltage reaches maximum of 20 volts. Nominal voltage is 18 volts.

ACCESSORIES

	WG543E	WG543E.9
Battery pack (WA3553)	1	/
Charger (WA3880)	1	/

We recommend that you purchase your accessories listed in the above list from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATION

INTENDED USE:
The blower is intended for residential use only. Use the blower outdoors to move yard debris as needed.

ASSEMBLY AND OPERATION

ACTION	FIGURE
ASSEMBLY	
Charging the battery pack Your battery pack is UNCHARGED, you must charge before use. More details can be found in charger's manual.	See Fig. A1, A2
WARNING! The charger and battery pack are specially designed to work together, so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because of an electrical failure and hazard will occur.	
Installing & removing the battery pack NOTE: Press the battery release button to release battery pack from your tool. After recharging, insert the battery pack into tool's battery port. A simple push and slight pressure will be sufficient.	See Fig. B, C
Air speed mode NOTE: The blower is in the air speed mode for default assembly.	See Fig. D
NOTE: The blower has two working modes: air speed mode and air volume mode. To change modes, depress the nozzle release button and slide backward for air speed mode. Slide forward for air volume mode. Choose a suitable mode according to your work. Air speed mode is recommended for cleaning in grass, as shown in Fig. H1. While air volume mode is recommended for cleaning on hard ground such as cement, as shown in Fig. H2.	
Air volume mode	See Fig. E, F
OPERATION	
Starting & Stopping WARNING! The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.	See Fig. G

Adjusting the blowing speed / air volume
with 2-speed switch

USER TIPS

- Hold the blow tube approximately 8" above the ground when operating the tool.
- Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you.
- After blowing the debris/leaves into a pile, it is easy to dispose of the pile.

See Fig.
H1, H2



CAUTION!

- **Do not blow hard objects such as nails, bolts, or rocks.**
- **Do not operate the blower near bystanders or pets.**
- **Use extra care when cleaning debris from stairs or other tight areas.**
- **Wear safety goggles or other suitable eye protection, long pants, and shoes.**

CLEANING THE TOOL

Clean the tool regularly.



WARNING! Keep your product dry. Under no circumstances spray with water.

- **To clean the tool, use only mild soap and a damp cloth.**
- **Do not use any type of detergent, cleaner or solvent which may contain chemicals that could seriously damage the plastic.**
- **Self lubricating bearings are used in your product, therefore lubrication is not required.**

ENVIRONMENTAL PROTECTION




Disposal

The machine, its accessories and packaging materials should be sorted for environmentally friendly recycling. The plastic components are labeled for categorized recycling.



שם החברה: סמיקום לקסיס בע"מ
כתובת: א"ת מערבי קדימה ת.ד. 9090 אבן יהודה
טלפון: 09-7611222
www.semicom.co.il

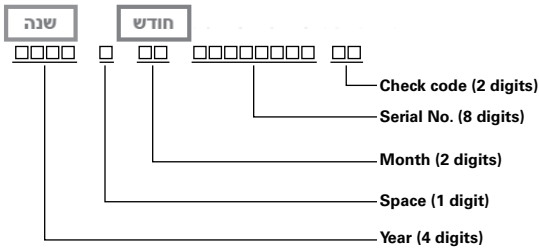

דוגמא



על הקוד המופיע על גוף הכלי מצויינים
השנה והחודש, לדוגמא במדבקה המצ"ב:
יוני, 2019

הפעלה

מטרת השימוש:

המפוח מיועד לשימוש אך ורק באזורי מגורים. יש להשתמש במפוח בחץ לסילוק פסולת על פי הצורך.

הרכבה והפעלה

פעולה		איור
הרכבה		
 טעינת מארז הסוללות מארז הסוללות אינו טעון, ויש לטעון אותו לפני השימוש אינפורמציה נוספת ניתן למצוא במדריך המטען אזהרה! המטען ומארז הסוללות נועדו ספציפית לפעול זה עם זה, ולכן אין לנסות ולהשתמש במכשיר אחר. אין להכניס עצמים מתכתיים או לאפשר להם לחדור לתוך המטען או חיבורי מארז הסוללות, כדי למנוע כשל חשמלי וסכנה.	ראה איור A1, A2	
 הסרת/התקנת הסוללה הערה! לחצו על לחצן שחרור הסוללה לשחרור הסוללה ולשליפתה בהחלקה מהכלי. החליקו את הסוללה בחזרה לכלי בסיום הטעינה תוך דחפיתה ולחיצתה בעדינות.	ראה איור B, C	
מצב מהירות אוויר הערה: המפוח נמצא במצב מהירות רוח להגדרת ברירת המחדל. הערה: למפוח שני מצבי עבודה: מצב מהירות רוח מצבנפח אוויר. כדי לשנות את המצב, לחץ על לחצן שחרור הזרובית והחליק לאחור כדי להיכנס מצב מהירות אוויר. החלק קדימה כדי להיכנס מצב נפח אוויר. בחר את המצב המתאים בהתאם לעבודה שלך. מומלץ להשתמש במצב מהירות הרוח כדי לנקות את הדשא, כפי שמוצג באיור H1. מומלץ להשתמש במצב נפח האוויר לניקוי משטחים קשים (כמו מלט), כפי שמוצג באיור H2.	ראה איור D	
מצב נפח אוויר	ראה איור E, F	
הפעלה		
 הפעלה/כיבו אזהרה! הכלי ממשיך לפעול למשך מספר שניות לאחר כיבוי. הניחו למנוע להגיע לעצירה מלאה לפני שתניחו את הכלי.	ראה איור G	

ראה איור H1, H2	התאמת מהירות הנשירה / נפח האוויר עם מתג דו מהיר שימוש במפוח שמרו על מרווח של כ-8" בין קצה הפייה והקרע בעת השימוש במפוח. הניעו את המפוח מצד לצד. התקדמו באיטיות תוך שמירה על ערימת העלים/הלכלוך לפניכם. - כך יהיה לכם קל יותר להשליך אותה לאשפה בגמר העבודה.  זהירות! אל תנשפו חפצים קשים כגון מסמרים, ברגים או אבנים. אל תפעילו את המפוח בקרבת עוברי אורח או חיות מחמד. נקטו משנה זהירות בעת פינוי לכלוך ממדרגות או ממקומות צרים אחרים. לבשו משקפי מגן או ציוד מגן אחר לעיניים, מכנסיים ארוכים ונעלי עבודה.

ניקוי הכלי

יש לנקות את הכלי בקביעות.



אזהרה! שמור את המוצר יבש. אין לרסס את המוצר במים בשום אופן.

- לניקוי הכלי, השתמש בסבון עדין ובמטלית לחה בלבד.
- אין להשתמש בשום סוג של חומר ניקוי, דטרגנט או ממש שעלול להכיל כימיקלים העשויים לגרום נזק חמור לפלסטיק.
- במוצר נעשה שימוש במסבים בסיכה עצמית, ולכן אין צורך בסיכה.

הגנת הסביבה



השלכה
יש למיין את המכונה, האביזרים וחומרי האריזה למיחזור ידידותי לסביבה.
רכיבי הפלסטיק מסומנים למיחזור לפי קטגוריות.

סמלים

	אזהרה!
	יש לקרוא את המדריך למפעיל
	הרכב מגן עיניים
	חבוש מגן אוזניים
	יש להרחיק עוברי אורח.
	אזהרה מפני סכנה
	אין להשתמש במוצר בגשם או להשאירו בחוץ כאשר יורד גשם
	לפני החלפת האביזרים, ודאו שהסוללה הוסרה.
	סוללת ליתיום-יון. מוצר זה תויג בסמלים המשוכיכים ל"אוסף יחיד" של כל חבילות הסוללות וחבילות הסוללה. לאחר מכן הוא ממוחזר או מוסר כדי להפחית את ההשפעה על הסביבה. חבילות הסוללות מכילה חומרים מזיקים העלולים להזיק לסביבה ולבריאות האדם.
	אסור לשרוף
	סוללות עלולות להיכנס למחזור מים אם הן מושלכות שלא כראוי, זה שעלול להיות מסוכן למערכת האקולוגית. אל תיפטר מסוללות פסולת כפסולת עירונית.

רשימת חלקים

1. זרבובית בורר מהירויות אוויר
2. צינור מפוח
3. מתג ON/OFF
4. ידית
5. לחצן לשחרור מארז סוללות*
6. מארז סוללות*
7. דיור מנוע
8. לחצן שחרור זרבובית
*לא כל האביזרים המוצגים או המתוארים כלולים במשלוח סטנדרטי.

נתונים טכניים

WG543E.9	WG543E	
20 V ~ עד **		מתח
I: 518 m ³ /h II: 696 m ³ /h (מצב נפח אוויר)		נפח אוויר מקסימאלי
I: 153 km/h II: 209 km/h (מצב מהירות אוויר)		מהירות רוח מקסימאלית
/	2 שעה (בקרוב)	זמן טעינה
1.1 ק"ג	1.7 ק"ג	משקל המכונה

* מתח מדוד ללא עומס עבודה. מתח סוללה ראשוני מגיע ל-20 וולט לכל היותר. המתח הנומינלי הוא 18 וולט.

אביזרים

WG543E.9	WG543E	
/	1	מארז סוללות (WA3553)
/	1	מטען (WA3880)

אנו ממליצים לרכוש את האביזרים באותה חנות שבה רכשת את הכלי. השתמש באביזרים מאיכות גבוהה, המסומנים במותג ידוע. בחר את הסוג בהתאם לעבודה שברצונך לבצע. למידע נוסף, עיין באריזת האביזר. אנשי המקצוע בחנות יכולים לסייע ולספק לך מידע נוסף.

אזהרות בטיחות כלליות



אזהרה: קרא את כל אזהרות הבטיחות ואת כל ההוראות. אי ציות להוראות אלו עלול לגרום להתחשמלות, שרפה ו/או לפציעה חמורה.
יש לקרוא את ההוראות היטב והפעלה בטוחה של המכונה.
שמור את מדריך הבטיחות וההפעלה לשימוש עתידי.

- מכשיר זה אינו מיועד לשימוש של אנשים (בכלל זה ילדים) עם מוגבלויות גופניות, חושיות או נפשיות או חוסר ניסיון וידע, אלא אם כן הם נמצאים תחת השגחה או הדרכה בנוגע לשימוש במכשיר על-ידי אדם האחראי על בטיחותם.
- יש להשגיח על ילדים קטנים כדי לוודא שלא ישחקו במכשיר.
- יש להשתמש במקור החשמל שסופק עם הכלי.

1 הכשרה

- (א) קרא את ההוראות היטב. יש להכיר את הבקורות והשימוש הנכון במכשיר;
- (ב) אין לאפשר לילדים להשתמש במכשיר;
- (ג) אין לאפשר לאנשים שאינם מכירים הוראות אלה להשתמש במכשיר. הקנות מקומיות עשויות להגביל את גיל המפעיל;
- (ד) אין להפעיל את המכשיר כאשר אנשים, בייחוד ילדים, או בעלי חיים נמצאים בקרבת מקום;
- (ה) המפעיל או המשתמש נושא באחריות לתאונות או סכנות שייגרמו לאנשים אחרים או לרכושם.

2 הכנה

- (א) בעת הפעלת המכשיר, יש ללבוש תמיד הנעלה המספקת כיסוי הולם ומכנסיים ארוכים. אין להפעיל את הצידוד ללא הנעלה או בסנדלים פתוחים;
- (ב) אין ללבוש פריטי לבוש חופשיים או תכשיטים שעלולים להישאב אל כניסת האוויר. יש להרחיק שיער ארוך מכניסות האוויר.
- (ג) יש להרכיב משקפי מגן בעת ההפעלה
- (ד) כדי למנוע גירוי מאבק, מומלץ ללבוש מסכת פנים
- (ה) אין להפעיל את המכשיר עם מגנים פגומים או ללא התקני בטיחות, כגון אוסף הפסולת

3 הפעלה

- (א) יש להוציא את מארז הסוללות מהמכשיר
- בעת השארת המכונה ללא השגחה;
- לפני פינוי סתימה;
- לפני בדיקה או ניקוי של המכשיר או עבודה עליו;
- אם המכשיר מתחיל לרעוד באופן חריג.
- (ב) יש להשתמש במכשיר אך ורק באור יום או בתאורה מלאכותית מתאימה.
- (ג) אין להושיט את המכשיר רחוק מדי, ויש להקפיד לשמור על איזון בכל עת.
- (ד) יש להקפיד על עמידה יציבה באזורים משופעים.
- (ה) יש לנוע בהליכה ולהימנע מריצה.
- (ו) יש להקפיד שכניסות אוויר הקירור יהיו פנויות מפסולת.
- (ז) אין להעיף פסולת בכיוונו של עוברי אורח.

4 תחזוקה ואחסון

- (א) יש לוודא שכל האומים והברגים מחוזקים היטב, כדי לוודא תנאי עבודה בטוחים של המכשיר;
- (ב) יש להחליף חלקים בלויים או פגומים.
- (ג) יש להשתמש אך ורק בחלקי חילוף ואביזרים מקוריים.
- (ד) יש לאחסן את המכשיר במקום יבש בלבד.

אזהרות בטיחות למארז הסוללות

- (א) אין לפרק, לפתוח או לגרום את הסוללות או מארז הסוללות.
- (ב) אין לקצר את מארז הסוללות. אין לאחסן מארזי סוללות באופן מסוכן בקופסה או במגירה שבה הם עלולים לקצר זה את זה או שחומרים מוליכים עלולים לקצר אותם. כאשר מארז הסוללות אינו בשימוש, יש להרחיק אותו מעצמים מתכתיים אחרים, כגון מחדקי נייר, מטבעות, מפתחות, מסמרים, ברגים או עצמים מתכתיים קטנים אחרים, העלולים ליצור חיבור מהדק אחד לאחר. קיצור הדקי סוללות עלול לגרום כוויות או שריפה.
- (ג) אין לחשוף את מארז הסוללות לחום או לאש. הימנע מאחסון במקום חשוף לאור שמש ישיר.
- (ד) יש למנוע פגיעה פיזית במארז הסוללות.
- (ה) במקרה של דליפת סוללה, אין לאפשר מגע של הנזלים עם העור או העיניים. במקרה של מגע, יש לשטוף את האזור הנגוע בכמויות גדולות של מים ולפנות לטיפול רפואי.
- (ו) יש לפנות מיד לטיפול רפואי במקרה של בליעת סוללה או מארז סוללות.
- (ז) יש לשמור את מארז הסוללות נקי ויבש.
- (ח) אם הדקי מארז הסוללות מתלככים, יש לנקותם במטלית יבשה ונקיה.
- (ט) יש לטעון את מארז הסוללות לפני השימוש. יש להקפיד תמיד על הוראות אלה ולהשתמש בהליך הטעינה הנכון.
- (י) אין להשאיר את מארז הסוללות בטעינה כאשר אינו בשימוש.
- (יא) לאחר תקופת ממושכות של אחסון, ייתכן שיהיה צורך לטעון ולפרוק את מארז הסוללות כמה פעמים להשגת ביצועים מרביים.
- (יב) מארז הסוללות מספק ביצועים מיטביים כאשר הוא פועל בטמפרטורת החדר הרגילה ($5^{\circ}\text{C} \pm 20^{\circ}\text{C}$).
- (יג) בעת השלכה של מארזי סוללות, יש להפריד זה מזה מארזי סוללות הפועלים בשיטות אלקטרו-כימיות שונות.
- (יד) יש לטעון מחדש רק באמצעות המטען המצוין על-ידי Worx. אין להשתמש בשום מטען מלבד המטען המסופק במיוחד לשימוש עם הצידוד. מטען המתאים למארז סוללות מסוג מסוים עלול ליצור סכנת שריפה בעת השימוש בו עם מארז סוללות אחר.
- (טו) אין להשתמש במארז סוללות שלא נועד לשימוש עם הצידוד.
- (טז) יש להרחיק את מארז הסוללות מהישיג ידם של ילדים.
- (יז) יש לשמור את מסמכי המוצר המקוריים לעיון בעתיד.
- (יח) הוצא את הסוללה מהצידוד כאשר אינו בשימוש.
- (יט) יש להשליך כהלכה.
- (כ) אין לערבב סוללות של ייצור, קיבולת, גודל או סוג שונים בהתקן.
- (כא) אל תסיר את מארז הסוללות מהאריזתו המקורית עד שיידרש.
- (כב) שים לב לסימני הפלוס (+) והמינוס (-) שעל הסוללה כדי לאשר שימוש נכון.



www.worx.com

Copyright © 2019, Positec. All Rights Reserved.
AR01534600