

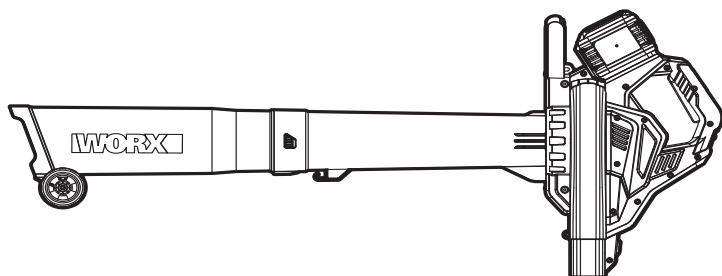








WORX®



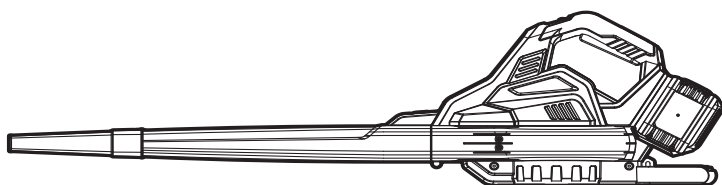







Cordless Blower/Vac/Mulcher
מפוח אלחוטי / שקע / מולצ'ר



WG583E WG583E.9

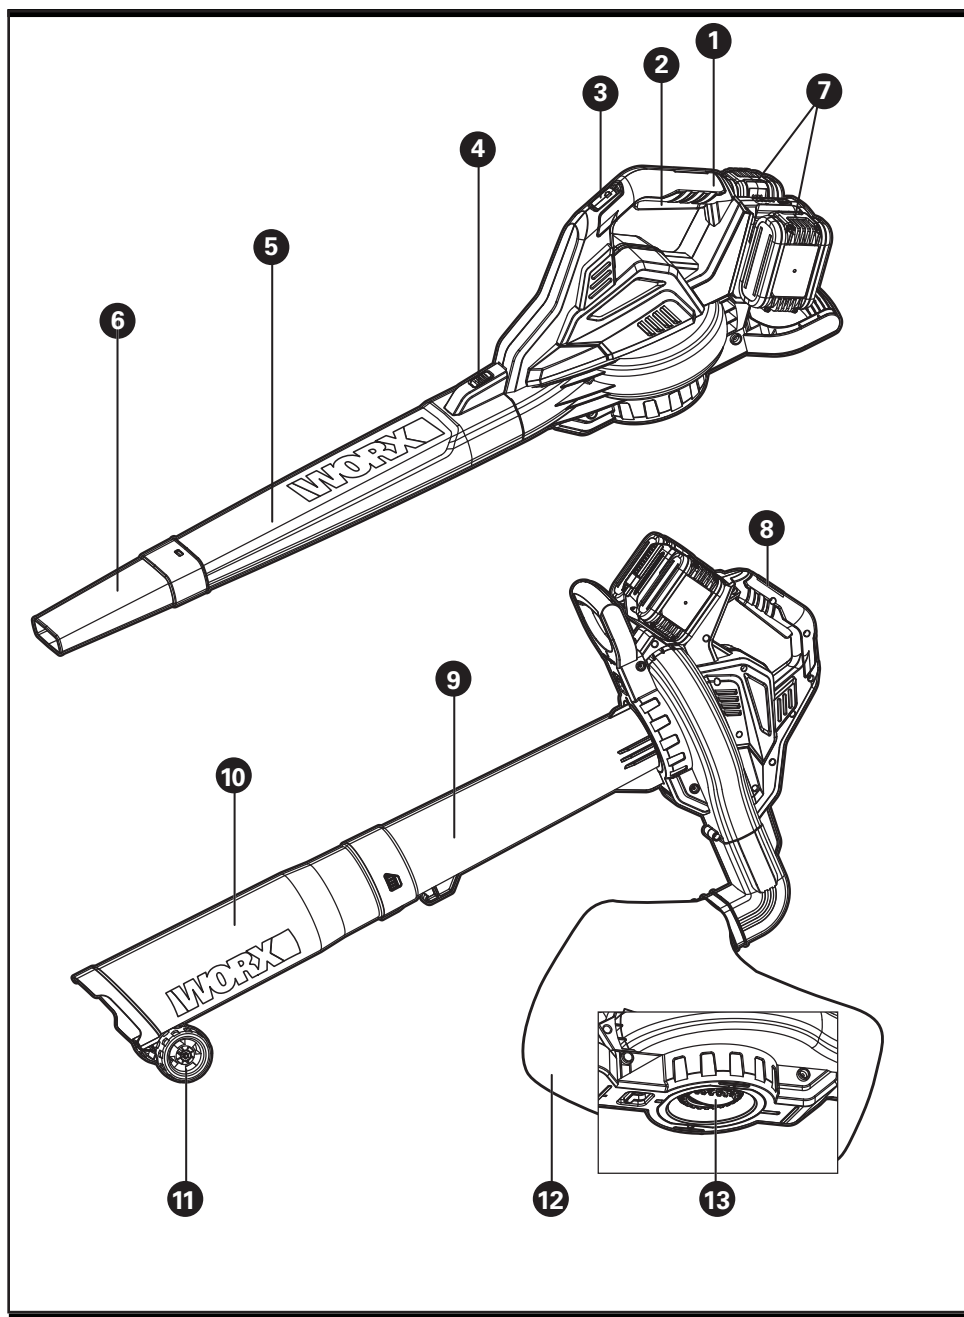

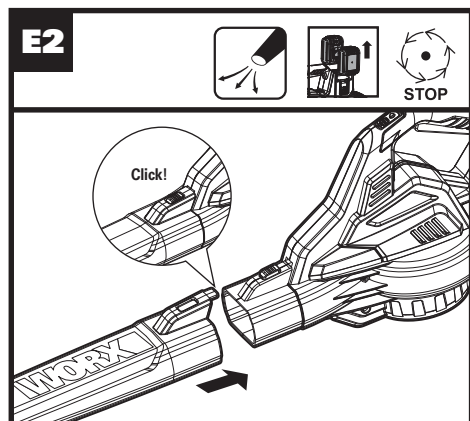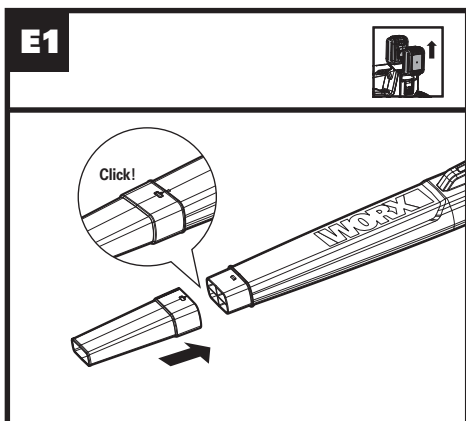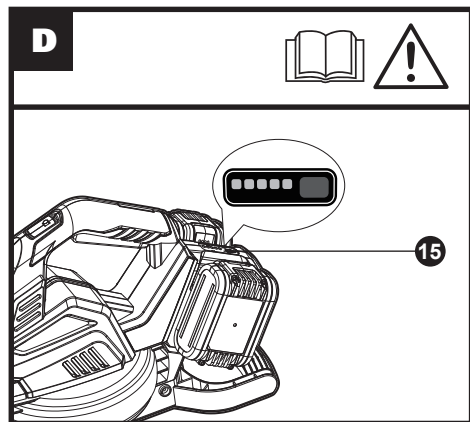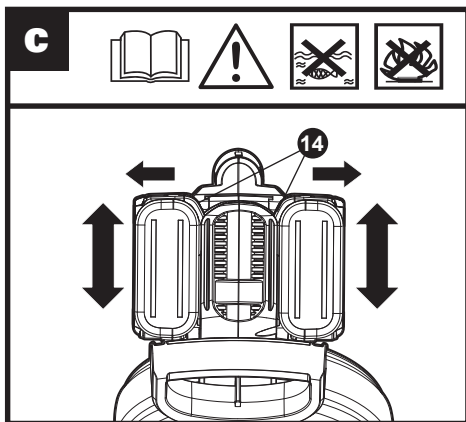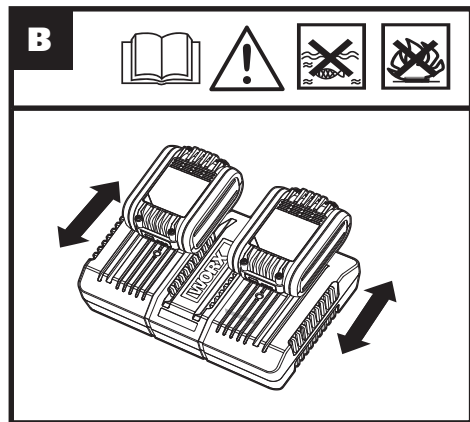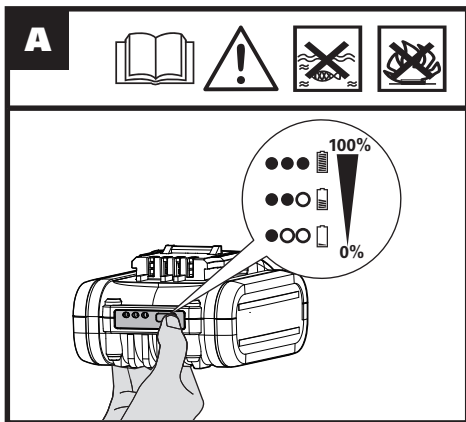


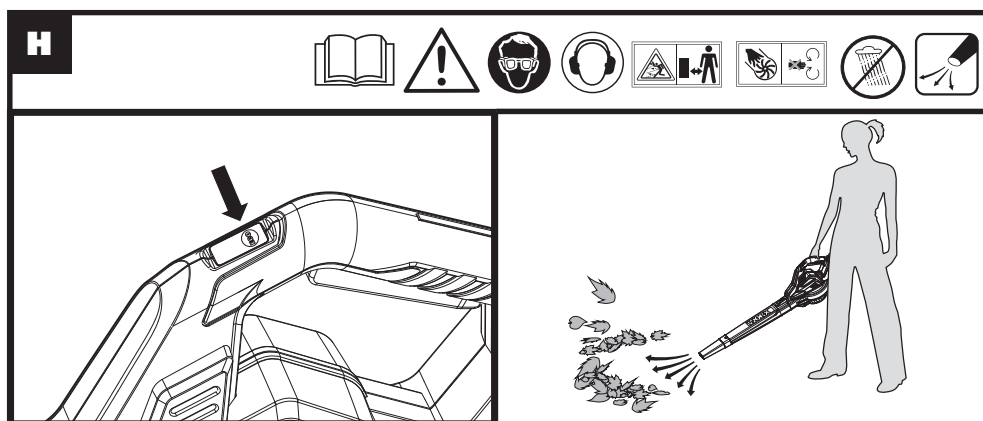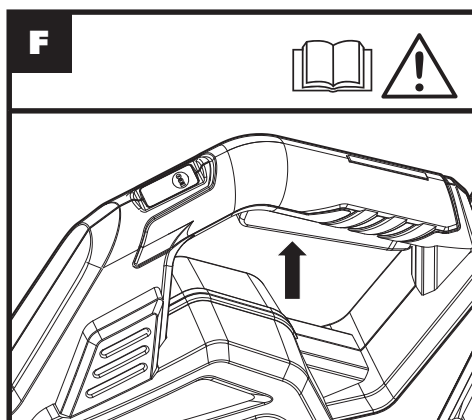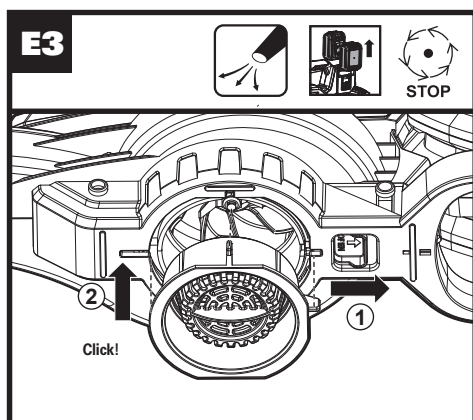

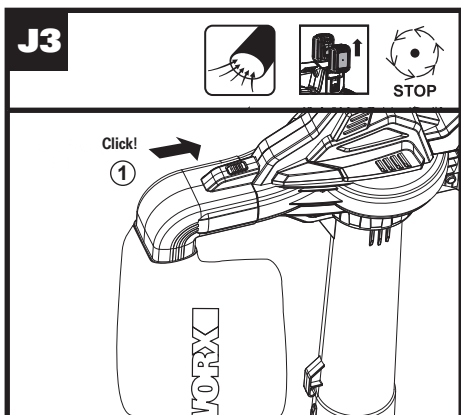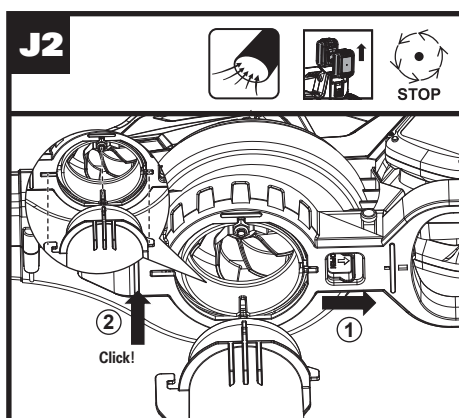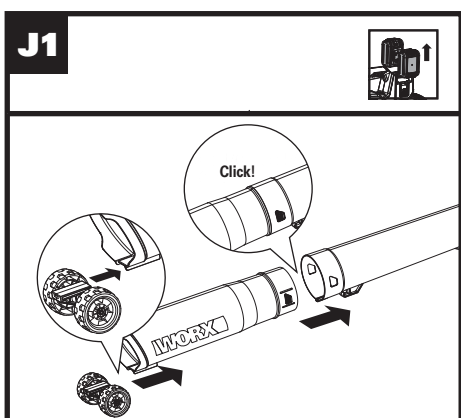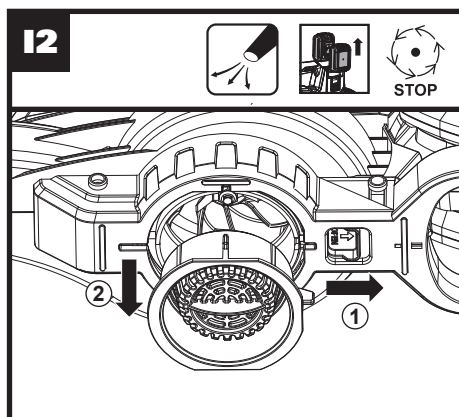
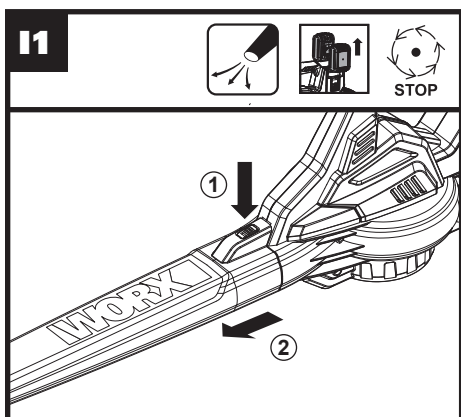


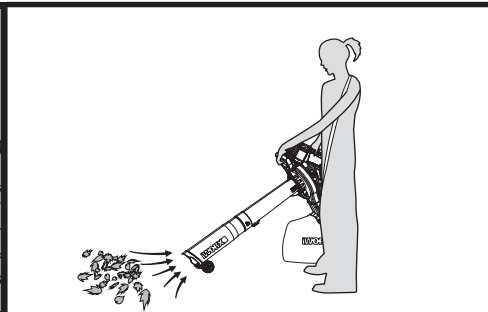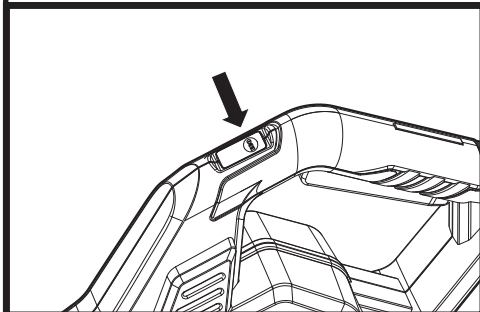K**L1**

STOP

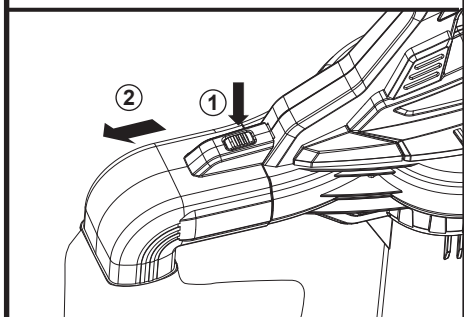**L2**

STOP

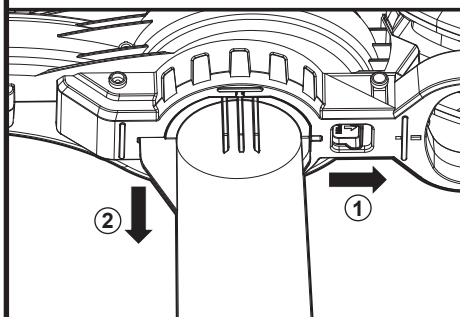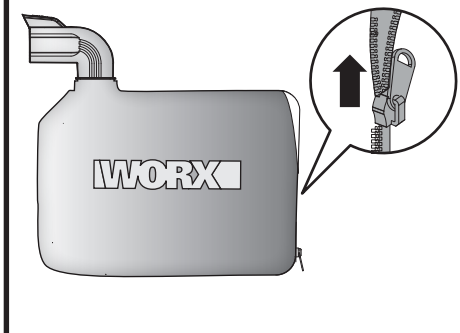**M1****M2**

GENERAL SAFETY WARNINGS



WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

**Carefully read the instructions for the safe operation of the machine.
Save all warnings and instructions for future reference.**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.

1) Training

- Read the instructions carefully. Be familiar with the controls and the proper use of the appliance;
- Never allow children to use the appliance.
- Never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator;
- Never operate the appliance while people, especially children, or pets are nearby;
- The operator or user is responsible for accidents or hazards occurring to other people or their property.

2) Preparation

- While operating the appliance, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;
- Do not wear loose clothing or jewellery that can be drawn into the air inlet. Keep long hair away from the air inlets.
- Wear protective goggles while operating
- To prevent dust irritation the wearing of a face mask is recommended
- Never operate the appliance with defective guards or shields, or without safety devices, for example debris collector in place

3) Operation

- Remove the battery pack from the appliance
 - whenever you leave the machine;
 - before clearing a blockage;
 - before checking, cleaning or working on the appliance;
 - if the appliance starts to vibrate abnormally.
- Operate the appliance only in daylight or in good artificial light.
- Do not overreach and keep your balance at all times.
- Always be sure of your footing on slopes.
- walk, never run.
- Keep all cooling air inlets clear of debris.

- Never blow debris in the direction of bystanders.

4) Maintenance and storage

- keep all nuts, bolts and screws tight to be sure the appliance is in safe working condition;
- Check the debris collector frequently for wear or deterioration.
- Replace worn or damaged parts.
- Use only genuine replacement parts and accessories.
- Store the appliance only in a dry place.

SAFETY WARNINGS FOR BATTERY PACK

- Do not dismantle, open or shred cells or battery pack.**
- Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- Do not subject battery pack to mechanical shock.**
- In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- Seek medical advice immediately if a cell or battery pack has been swallowed.**
- Keep battery pack clean and dry.**
- Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- Do not maintain battery pack on charge when not in use.**
- After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- Battery pack gives its best performance when it is operated at normal room temperature (20 °C ± 5 °C).**
- When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.**
- Recharge only with the charger specified by Worx. Do not use any charger other than that specifically provided for use with the equipment. A charger that is suitable for one type of battery pack may create a risk of fire when used with**

another battery pack.

- o) Do not use any battery pack which is not designed for use with the equipment.**
- p) Keep battery pack out of the reach of children.**
- q) Retain the original product literature for future reference.**
- r) Remove the battery from the equipment when not in use.**
- s) Dispose of properly.**
- t) Do not mix cells of different manufacture, capacity, size or type within a device.**
- u) Do not remove battery pack from its original packaging until required for use.**
- v) Observe the plus (+) and minus (–) marks on the battery and ensure correct use.**

SYMBOLS

	Read operator's manual
	Warning!
	Wear eye protection
	Wear ear protection
	Keep bystanders away
	Warning of hazard
	Do not use in the rain or leave outdoors while it is raining.

	Blow mode
	Vacuum mode
	Impeller continues to rotate after the machine is switched off. Wait until all machine components have completely stopped before touching them.
	Remove battery from the socket before carrying out any adjustment, servicing or maintenance.
	Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.
	Do not burn
	Li-Ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.

COMPONENT LIST

1. HANDLE

2. ON/OFF SWITCH

3. HIGH/LOW SPEED CONTROL BUTTON

4. TUBE RELEASE BUTTON

5. BLOWER TUBE

6. BLOWER TUBE NOZZLE

7. BATTERY PACKS*

8. ANTI-STATIC STRIP
9. UPPER VACUUM TUBE
10. LOWER VACUUM TUBE
11. WHEELS
12. LEAF COLLECTION BAG
13. FAN HOUSING COVER
14. BATTERY PACK RELEASE BUTTON*(SEE FIG. C)
15. BATTERY INDICATOR LIGHT (SEE FIG.D)

***Not all the accessories illustrated or described are included in standard delivery.**

TECHNICAL DATA

	WG583E	WG583E.9
Rated voltage	40 V  MAX (2x20 V MAX)**	
blow speed	Max. 335 km/h	
vacuum capacity	Max.575 m³/h	
Mulching ratio	12:1	
Collection bag capacity:	35 L	
Battery type	Lithium-ion	/
Battery capacity	4.0 Ah (WA3553)	/
Charger model	WA3883	/
Charger rating	Input: 100-240 V~ 50-60 Hz Output 1: 20 V  , 2.0 A *** Output 2: 20 V  , 2.0 A ***	/
Charging time (approx.) Battery pack: 4.0 Ah (1 pc) 4.0 Ah (2 pcs)	1 hr 2 hrs	/
Machine weight	4.2kg (Blow) 5.1kg (Vac)	2.9kg (Blow) 3.8kg (Vac)

** Voltage measured without workload. Initial battery voltage reaches maximum of 20 volts. Nominal voltage is 18 volts.

*** Charger output 1 and output 2 mean two ports with the same output voltage and current.

ACCESSORIES

	WG583E	WG583E.9
Battery pack	2 (WA3553)	/
Charger	1 (WA3883)	/

We recommend that you purchase your accessories listed in the above list from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATION

INTENDED USE

The blower & Vac is intended for residential use only. Use the blower outdoors to move or vacuum yard debris as needed.

ASSEMBLY AND OPERATION

ACTION	FIGURE
BEFORE OPERATION	
Checking the battery condition NOTE: Fig. A only applies for the battery pack with battery indicator light.	See Fig. A
Charging the battery pack NOTE: - The batteries are shipped uncharged. Each battery must be fully charged before the first use. - Always fully charge the two batteries at same time. More details can be found in charger's manual.  WARNING! The charger and battery pack are specially designed to work together, so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because of an electrical failure and hazard will occur.	See Fig. B
Installing and Removing the battery pack NOTE: This machine will only run when 2 batteries are installed. It is recommended to use the same two batteries and charge the two batteries at the same time. When you use two batteries with different power, the machine will only run to the level of the lowest charged battery	See Fig. C

Battery indicator light See details in BATTERY STATUS part IMPORTANT: When only one light is illuminated, your battery is overly discharged, even though the machine may still be capable to work. Continuing to operate your machine with the battery in this discharged condition may reduce the life and performance of your battery. When no light is illuminated, at least one battery is not fully installed or battery may be defective, please double check the batteries are fully seated into position.	See Fig. D
--	------------

OPERATION

Blow mode

Assembling the Blower Tube and fan housing cover

See Fig. E1,E2,E3

On/off Switch

 **WARNING! The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.**

See Fig. F

Using the Blower
USER TIPS

- Hold the blow tube approximately 8" above the ground when operating the tool.

- Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you.

 **CAUTION! Do not blow hard objects such as nails, bolts, or rocks.**

See Fig.G

Adjusting the blowing speed

NOTE: the speed your tool keeps each time you turn it on is the speed when you turned it off last time. If necessary, please readjust the speed.

See Fig.H

Vacuum mode

Disassembling the blower tube and fan housing cover

See Fig. I1,I2

Assembling the vacuum Tube and wheel

See Fig. J1,J2

Assembling the Leaf Collection Bag

See Fig. J3

On/off Switch

 **WARNING! The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.**

See Fig.F

Using the Vacuum

NOTE: It is recommended to use high speed for best vacuum performance.

See Fig. K

Disassembling the vacuum Tube and the Leaf Collection Bag

See Fig. L1,L2

Emptying the Leaf Collection Bag

See Fig. M1,M2

Removing Clogged Debris from the Impeller (no tool included)

Note: Ensure to remove the batteries before attempting to clear any debris.

See Fig. N

BATTERY STATUS (See Fig. D)

- Before starting or after use, press the button beside the power indicator light on the machine to check the battery capacity.
- During operation, the battery capacity will be indicated automatically by the battery power indicator. The indicator constantly senses and displays the battery condition as follows.
- For the machine with 2 battery packs with different power, the power indicator light displays the battery condition with the lower one of the two batteries.

Battery indicator light status	Battery condition
Five green lights (●●●●●) are illuminated.	The two batteries are in a highly charged condition.
Two, three or four green lights are illuminated.	The two batteries have a remaining charge. The more lights are illuminated, the more battery capacity.
Only one green light (●□□□□) is illuminated.	The battery level of at least one battery pack is very low. Please check and charge the battery pack.
No light is illuminated.	At least one battery is not fully installed or battery may be defective.

Only one light is flashing twice per cycle.	At least one battery is over discharged (please refer to the battery charge condition), please recharge the two batteries at once before use again or storage.
Only one light is flashing three times per cycle.	At least one battery is hot, wait for them cool down before start again.
Only one light is flashing four times per cycle.	The machine is over load. Remove tool from blowing area and try again.

STORAGE

Store the Blower/Vacuum indoors, in a cool dry location, out of reach of children and animals.

CLEANING THE TOOL

Clean the tool regularly.



Warning! Keep your product dry. Under no circumstances spray with water.

- **To clean the tool, use only mild soap and a damp cloth.**
- **Do not use any type of detergent, cleaner or solvent which may contain chemicals that could seriously damage the plastic.**

ENVIRONMENTAL PROTECTION



Disposal

The machine, its accessories and packaging materials should be sorted for environmentally friendly recycling. The plastic components are labeled for categorized recycling.

שתי הסוללות נמצאות במצב של תשלום גבוה.	חמישה (●●●●●) אורות ירוקים מוארים.
יתרת הסוללה של שתי הסוללות. ככל שהאורות יותר, כך גדלה קיבולת הסוללה.	שניים, שלושה או ארבעה אורות ירוקים מוארים.
לפחות סוללה אחת מותשת ויש לטעון אותה מחדש.	ארבעה (●○○○○) רק אור ירוק אחד מאיר.
אלפחות סוללה אחת אינה מותקנת במלואה או שהסוללה פגומה.	אין אור מואר.
לפחות סוללה אחת נפרקת יתר על המידה (עייני במצב טעינת הסוללה), אלא טען שתי סוללות מיד לפני שימוש חוזר או אחסון.	רק אור אחד מהבהב פעמיים בכל מחזור.
לפחות אחת הסוללות היא חמה מאוד, אלא המתן עד שיתקררו ולאחר מכן יפעילו מחדש.	רק אור אחד מהבהב שלוש פעמים במחזור.
המכונה טעונה עומס יתר. הגדל את גובה החיתוך או דחף לאט.	רק אור אחד מהבהב ארבע פעמים במחזור.

אחסון

יש לאחסן את המפוח/השואב בתוך מבנה, במקום יבש וקרי, הרחק מילדים ובעלי חיים.

ניקוי הכלי

יש לנקות את הכלי בקביעות.

- לניקוי הכלי, השתמש בסבון עדין ובמטלית לחה בלבד.
- אין להשתמש בשום סוג של חומר ניקוי, דטרגנט או מנס שכולל להכיל כימיקלים העשויים לגרום נזק חמור לפלסטיק.
- במוצר נעשה שימוש במסבים בסיכה עצמית, ולכן אין צורך בסיכה.

הגנת הסביבה

השלכה



יש למיין את המכונה, האביזרים וחומרי האריזה למיחזור ידידותי לסביבה.

רכיבי הפלסטיק מסומנים למיחזור לפי קטגוריות.



שם החברה: סמיקום לקסיס בע"מ
כתובת: א"ת מערבי קדימה ת.ד. 9090 אבן יהודה
טלפון: 09-7611222
www.semicom.co.il

הפעלה	
מצב תפעול מפוח	
רכיב צינור המפוח והמאוורר מעטפת כיסוי	ראה איורים E1,E2,E3
מתג הפעלה/כבוי ⚠ אזהרה! הכלי ממשיך לפעול למשך מספר שניות לאחר כיבוי. הניחו למנוע להגיע לעצירה מלאה לפני שתניחו את הכלי.	ראה איורים F
שימוש במפוח שימוש במפוח שמרו על מרווח של כ-4" בין קצה הפייה והקרקע בעת השימוש במפוח. הניעו את המפוח מצד לצד. התקדמו באיטיות תוך שמירה על ערימת העלים/הלכלוך לפניכם. ⚠ זיהרות! אל תנשפו חפצים קשים כגון מסמרים, ברגים או אבנים.	ראה איורים G
כיוון מהירות המפוח הערה: המהירות שנשמרת בכל פתיחת הכלי היא המהירות שבה נסגר הכלי בפעם האחרונה. במידת הצורך, התאם מחדש את המהירות.	ראה איורים H
מצב תפעול שאיבה	
הסר את המפוח והמאוורר דיור הכיסוי	ראה איורים I1,I2
הרכיב צינור ואקום גלגל	ראה איורים J1,J2
חיבור שק איסוף העלים	ראה איורים J3
מתג הפעלה/כבוי ⚠ אזהרה! הכלי ממשיך לפעול למשך מספר שניות לאחר כיבוי. הניחו למנוע להגיע לעצירה מלאה לפני שתניחו את הכלי.	ראה איורים F
שימוש בשואב הערה: מומלצת במהירות גבוהה לביצועים הטובים ביותר בוואקום.	ראה איורים K
הסר את צינור הוואקום ושקית העלים	ראה איורים L1,L2
ריקון השק	ראה איורים M1,M2
הסרת נשורת שנתקעה בגלגל המניע (לא מצורף כלי) הערה: לפני שתנסה להסיר פסולת כלשהי, הקפד להסיר את הסוללה.	ראה איורים N

מצב הסוללה (ראה איור D)

- לאחר ההפעלה או השימוש, לחץ על הלחצן ליד מחוון ההפעלה שבמכשיר כדי לבדוק את קיבולת הסוללה. במהלך הפעולה, קיבולת הסוללה תוצג אוטומטית על ידי מחוון מפלס הסוללה.
- המחוון ממשיך לחוש ומציג את מצב הסוללה באופן הבא.
- עבור מכשירים עם שתי מארזי שמל שונים, מחוון ההפעלה ישתמש בחלק התחתון של שתי הסוללות כדי לציין את מצב הסוללה.

מצב מחוון מתח סוללה	תנאי סוללה
---------------------	------------

אביזרים

WG583E.9	WG583E	
/	2 (WA3553)	תולולס זראמ
/	1 (WA3883)	נעטמ

אנו ממליצים לרכוש את האביזרים באותה חנות שבה רכשת את הכלי. השתמש באביזרים מאיכות גבוהה, המסומנים במוטג ידוע. בחר את הסוג בהתאם לעבודה שברצונך לבצע. למידע נוסף, עיין בארזית האביזר. אנשי המקצוע בחנות יכולים לסייע ולספק לך מידע נוסף.

הפעלה

מטרת השימוש:

המפוח והשוואב נועדו לשימוש ביתי בלבד. השתמש במפוח בחוץ כדי להזיז או לשאוב נשורת בחצר, כנדרש.

הרכבה והפעלה

פנולה	איור
לפני הפעולה	
בדיקת מצב סוללה הערה: איור A זמין רק עבור ערכות סוללות עם מחוון סוללה.	ראה איורים A
טעינת מארז הסוללות הערה: - הסוללה אינה חיה. כל סוללה חייבת להיות טעונה במלואה לפני הכסוח הראשון. - תמיד לטעון את שתי הסוללות. פרטים נוספים ניתן למצוא במדריך המטען. אזהרה! המטען ומארז הסוללות נועדו ספציפית לפעול זה עם זה, ולכן אין לנסות ולהשתמש במכשיר אחר. אין להכניס עצמים מתכתיים או לאפשר להם לחדור לתוך המטען או חיבורי מארז הסוללות, כדי למנוע כשל חשמלי וסכנה.	ראה איורים B
הסרת/התקנת הסוללה הערה: - יחידה זו פועלת רק כאשר מותקנות 2 סוללות. השתמש תמיד בשתי סוללות בעלות קיבולת זהה וטען את שתי הסוללות במלואן. - בעת שימוש בשתי סוללות בעלות הספק שונה, מכשיר יפעל רק לרמה של הסוללה הטעונה הנמוכה ביותר	ראה איורים C
סוללה מונחת חיווי לפרטים נוספים ראה חלק מצב הסוללה חשוב כאשר רק אור אחד מואר, לפחות אחת הסוללות מותשת ויש לטעון אותה, גם אם מכסחת הכיסוח עדיין יכולה לכסח. המשך פעולת הסוללה של רובומו במצב פריקה זה עשוי להפחית את חיי הסוללה ואת הביצועים. כאשר לא דולקות נוריות, לפחות אחת מהסוללות אינה מותקנת במלואה או שהסוללה גומה, ודא שהסוללה מונחת במלואה.	ראה איורים E

5. צינור מפוח
6. זרבובית מפוח
7. מארז סוללות*
8. רצועה אנטי סטטית
9. צינור מפוח עליון
10. צינור מפוח תחתון
11. גלגלים
12. שק איסוף עלים
13. אוהד דיור כיסוי
14. לחצן לשחרור מארז סוללות * (C ראה איור)
15. אוהד דיור כיסוי (D ראה איור)

* כל האביזרים המוצגים או המתוארים כלולים במשלוח סטנדרטי

נתונים טכניים

WG583E.9	WG583E	
מתח $\approx 40V$ מקס ** (מקס $2 \times 20V$)		מתח
מקסימום $335 km/h$		מהירות מכה
מקסימום $575 m^3/h$		קיבולת ואקום
12:1		קצב גיבוב עלים
35L		קיבולת שק האיסוף
/	ליתיום-יון	סוג סוללה
/	4.0Ah (WA3553)	קיבולת סוללה
/	WA3883	דגם מטען
/	100-240V~50-60Hz כניסה: 20V, 2.0A *** 20V, 2.0A ***	דירוג מטען
/	1 שעה 2 שעה	(בקרוב) זמן טעינה: מארז סוללות 4.0 Ah (1pc) 4.0 Ah (2pcs)
2.9 ק"ג (מכה) 3.8 ק"ג (ואקום)	4.2 ק"ג (מכה) 5.1 ק"ג (ואקום)	משקל המכשיר

** מתח מדוד ללא עומס עבודה. מתח סוללה ראשוני מגיע ל-20 וולט לכל היותר. המתח הנומינלי הוא 18 וולט.
*** יציאת מטען 1 ותפוקה 2 מציינים כי לשני היציאות יש אותו זרם פלט וזרם.

- האזור הנגוע בכמויות גדולות של מים ולפנות לטיפול רפואי.
- (ו) יש לפנות מיד לטיפול רפואי במקרה של בליעת סוללה או מארז סוללות.
- (ז) יש לשמור את מארז הסוללות נקי ויבש.
- (ח) אם הדקי מארז הסוללות מתכלכים, יש לנקותם במטלית יבשה ונקייה.
- (ט) יש לטעון את מארז הסוללות לפני השימוש. יש להקפיד תמיד על הוראות אלה ולהשתמש בהליך הטעינה הנכון.
- (י) אין להשאיר את מארז הסוללות בטעינה כאשר אינו בשימוש.
- (יא) לאחר תקופות ממושכות של אחסון, ייתכן שיהיה צורך לטעון ולפרוק את מארז הסוללות כמה פעמים להשגת ביצועים מרביים.
- (יב) מארז הסוללות מספק ביצועים מיטביים כאשר הוא פועל בטמפרטורות החדר הרגילה ($20^{\circ}\text{C} \pm 5^{\circ}\text{C}$).
- (יג) בעת השלכה של מארזי סוללות, יש להפריד זה מזה מארזי סוללות הפועלים בשיטות אלקטרו-כימיות שונות.
- (יד) יש לטעון מחדש רק באמצעות המטען המצוין על-ידי Worx. אין להשתמש בשום מטען מלבד המטען המסופק במיוחד לשימוש עם הציוד. מטען המתאים למארז סוללות מסוג מסוים עלול ליצור סכנת שריפה בעת השימוש בו עם מארז סוללות אחר.
- (טו) אין להשתמש במארז סוללות שלא נועד לשימוש עם הציוד.
- (טז) יש להרחיק את מארז הסוללות מהישג ידם של ילדים.
- (יז) יש לשמור את מסמכי המוצר המקוריים לעין בעתיד.
- (יח) הוצא את הסוללה מהציוד כאשר אינו בשימוש.
- (יט) יש להשליך כהלכה.
- (כ) אין לערבב סוללות של ייצור, קיבולת, גודל או סוג שונים בהתקן.
- (כא) אל תסיר את מארז הסוללות מהארזתו המקורית עד שיידרש.
- (כב) שים לב לסימני הפלוס (+) והמינוס (-) שעל הסוללה כדי לאשר שימוש נכון.


סמלים

	יש לקרוא את המדריך למפעיל
	אזהרה!
	הרכב מגן עיניים
	חבוש מגן אוזניים
	יש להרחיק עוברי אורח.

רשימת חלקים

1.	ידית
2.	מתג הפעלה/כבוי
3.	גבולה/כפתור בקרת מהירות נמוכה
4.	לחצן שחרור צינור

אזהרה מפני סכנה	
אין להשתמש במוצר בגשם או להשאירו בחוץ כאשר יורד גשם.	
מצב תפעול מפוח	
מצב תפעול שאיבה	
הגלגל המניע ממשיך להסתובב לאחר כיבוי המכונה. המתן עד שרכיבי המכונה ייעצרו לחלוטין לפני שתגיע בהם.	
לפני החלפת האביזרים, ודאו שהסוללה הוסרה.	
סוללות עלולות להיכנס למחזור מים אם הן מושלכות שלא כראוי, זה שעלול להיות מסוכן למערכת האקולוגית. אל תיפטר מסוללות פסולות כפסולת עירונית.	
אל תשרוף	
סוללת ליתיום-יון. מוצר זה תווג בסמלים המשויכים ל"אוסף יחיד" של כל חבילות הסוללות וחבילות הסוללה. לאחר מכן הוא ממוחזר או מוסר כדי להפחית את ההשפעה על הסביבה. חבילת הסוללות מכילה חומרים מזיקים העלולים להזיק לסביבה ולבריאות האדם.	

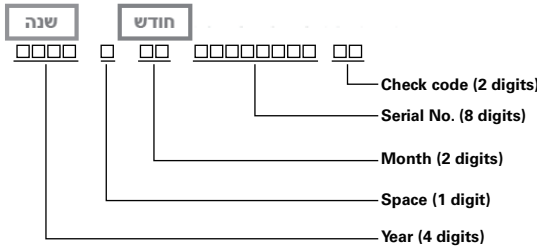

דוגמא



על הקוד המופיע על גוף הכלי מציינים
השנה והחודש, לדוגמא במדבקה המצ"ב:
יוני, 2019

אזהרות בטיחות כלליות

אזהרה: קרא את כל אזהרות הבטיחות ואת כל
ההוראות. אי ציות להוראות אלו עלול לגרום להתחשמלות,
שרפה ו/או לפציעה חמורה.

יש לקרוא את ההוראות היטב להפעלה בטוחה של המכונה.
שמור את מדריך הבטיחות וההפעלה לשימוש עתידי.
- מכשיר זה אינו מיועד לשימוש של אנשים (בכלל זה ילדים)
עם מוגבלויות גופניות, חושיות או נפשיות או חוסר ניסיון וידע,
אלא אם כן הם נמצאים תחת השגחה או הדרכה בנוגע לשימוש
במכשיר על-ידי אדם האחראי על בטיחותם.
- יש להשגיח על ילדים קטנים כדי לוודא שלא ישחקו במכשיר.
- יש להשתמש במקור החשמל שסופק עם הכלי.

1 הכשרה

(א) קרא את ההוראות היטב. יש להכיר את הברקות והשימוש
הנכון במכשיר;
(ב) אין לאפשר לילדים להשתמש במכשיר;
(ג) אין לאפשר לאנשים שאינם מכירים ההוראות אלה להשתמש
במכשיר. תקנות מקומיות עשויות להגביל את גיל המפעיל;
(ד) אין להפעיל את המכשיר כאשר אנשים, בייחוד ילדים, או
בעלי חיים נמצאים בקרבת מקום;
(ה) המפעיל או המשתמש נושא באחריות לתאונות או סכנות
שיגרמו לאנשים אחרים או לרכושם.

2 הכנה

(א) בעת הפעלת המכשיר, יש ללבוש תמיד הנעלה המספקת
ניסיון הולם ומכנסים ארוכים. אין להפעיל את הצידוד ללא
הנעלה או בסנדלים פתוחים;
(ב) אין ללבוש פריטי לבוש חופשיים או תכשיטים שעלולים
להישאב אל כניסת האוויר. יש להרחיק שיער ארוך מכניסות
האוויר;
(ג) יש להרכיב משפטי מגן בעת ההפעלה
(ד) כדי למנוע גירוי מאבק, מומלץ ללבוש מסכת פנים
(ה) אין להפעיל את המכשיר עם מגנים פגומים או ללא התקני
בטיחות, כגון אוסף הפסולת

3 הפעלה

(א) יש להוציא את מארז הסוללות מהמכשיר

- בעת השארת המכונה ללא השגחה;
- לפני פינוי סתימה;
- לפני בדיקה או ניקוי של המכשיר או עבודה עליו;
- אם המכשיר מתחיל לרעוד באופן חריג.
- (ב) יש להשתמש במכשיר אך ורק באור יום או בתאורה מלאכותית מתאימה.
- (ג) אין להושיט את המכשיר רחוק מדי, ויש להקפיד לשמור על איזון בכל עת.
- (ד) יש להקפיד על עמידה יציבה באזורים משופעים.
- (ה) יש לנוע בהליכה ולהימנע מריצה.
- (ו) יש להקפיד שכניסות אוויר הקירור יהיו פנויות מפסולת.
- (ז) אין להעיף פסולת בכיוונו של עוברי אורח.

4 תחזוקה ואחסון

- (א) יש להחזיק את כל הברגים, הברזים והאומים כאשר הם ממוקמים כדי להבטיח שהמכשיר בטוח לעבודה.
- (ב) יש לבדוק את שק הפסולת באופן קבוע מחשש לבליא או פגמים.
- (ג) יש להחליף חלקים פגומים.
- (ד) יש להשתמש רק בחלקי חילוף ואביזרים מקוריים.
- (ה) יש לאחסן את המכשיר רק במקום יבש.

אזהרות בטיחות למארז הסוללות

- (א) אין לפרק, לפתוח או לגרום את הסוללות או מארז הסוללות.
- (ב) אין לקצר את מארז הסוללות. אין לאחסן מארזי סוללות באופן מסוכן בקופסה או במגירה שבה הם עלולים לקצר את זה או שחומרים מוליכים עלולים לקצר אותם. כאשר מארז הסוללות אינו בשימוש, יש להרחיק אותו מעצמים מתכתיים אחרים, כגון מהדקי נייר, מטבעות, מפתחות, מסמרים, ברגים או עצמים מתכתיים קטנים אחרים, העלולים ליצור חיבור מהדק אחד לאחר. קיצור הדקי סוללות עלול לגרום כוויות או שריפה.
- (ג) אין לחשוף את מארז הסוללות לחום או לאש. הימנע מאחסון במקום חשוף לאור שמש ישיר.
- (ד) יש למנוע פגיעה פיזית במארז הסוללות.
- (ה) במקרה של דליפת סוללה, אין לאפשר מגע של הנוזלים עם העור או העיניים. במקרה של מגע, יש לשטוף את



www.worx.com

Copyright © 2020, Positec. All Rights Reserved.
AR01539200