

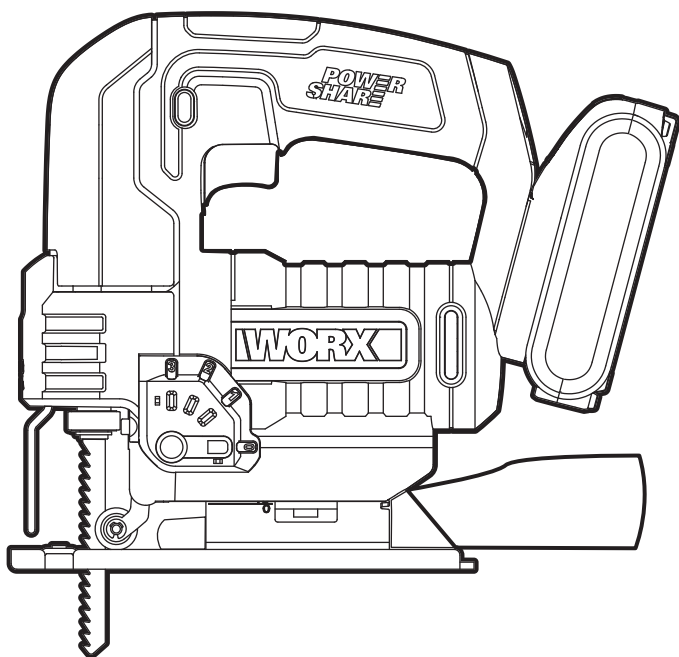








WORX®






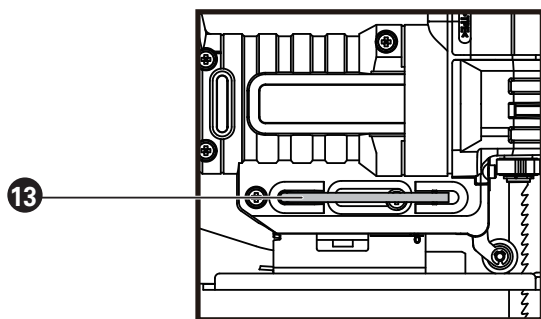







Cordless Jigsaw
פאזל אלחוטי

WX543 WX543.2 WX543.9

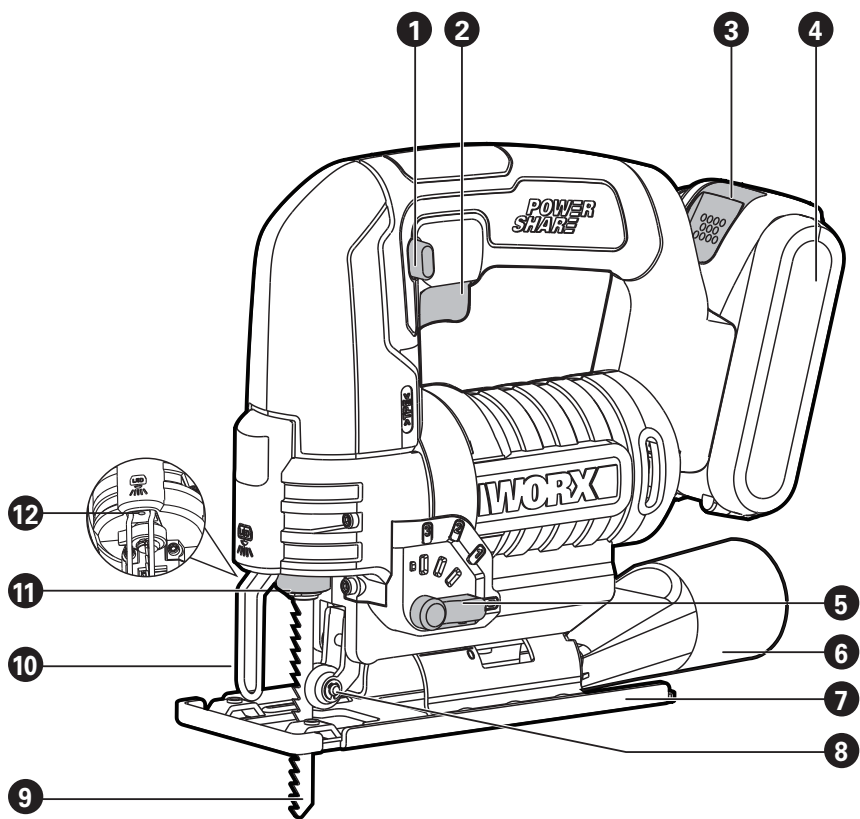

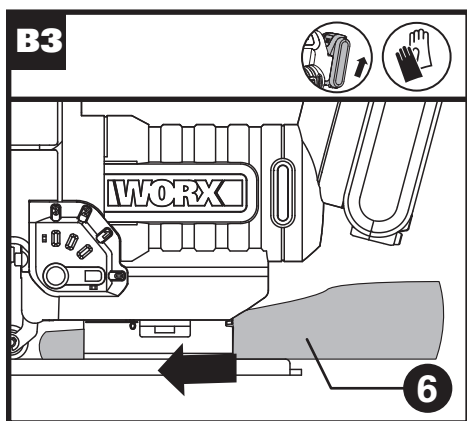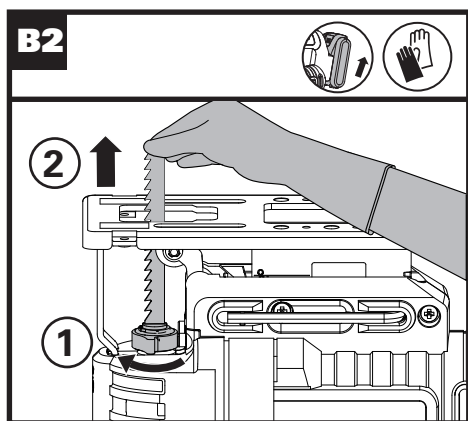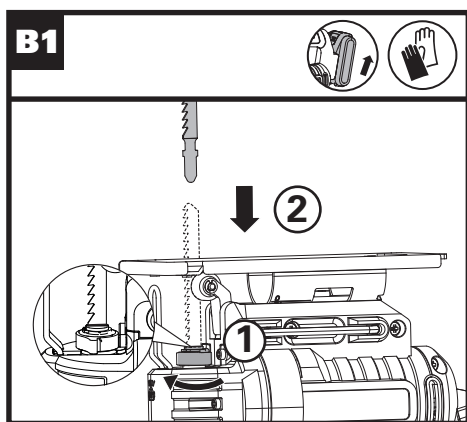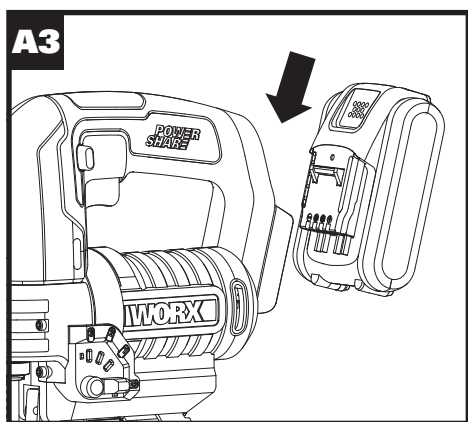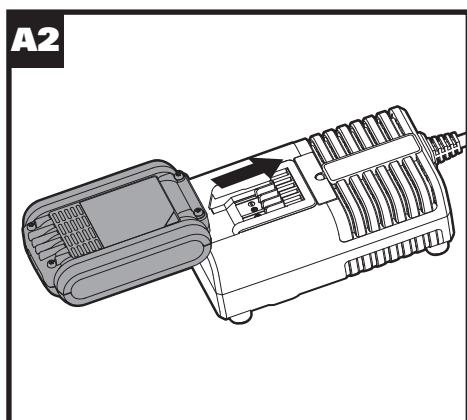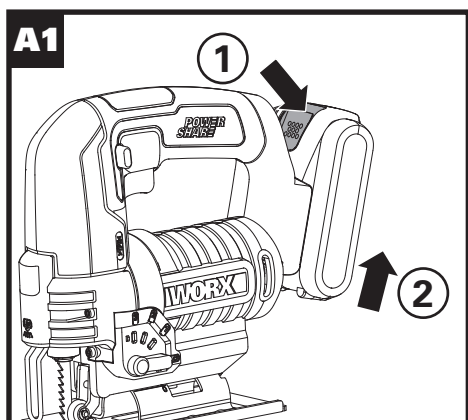

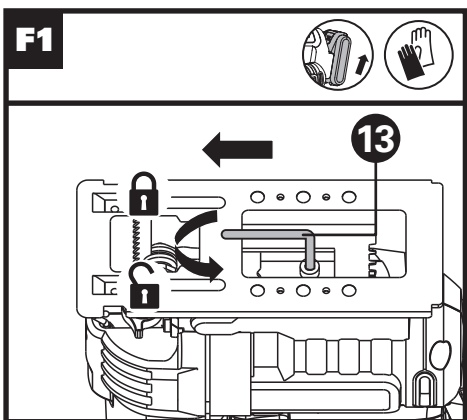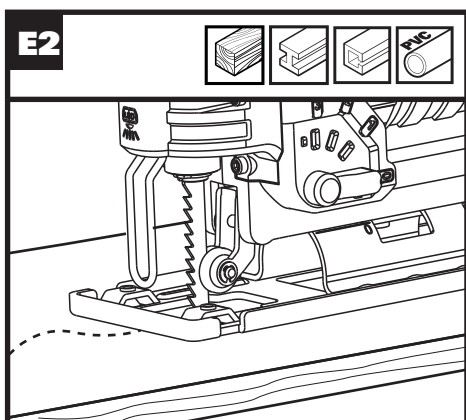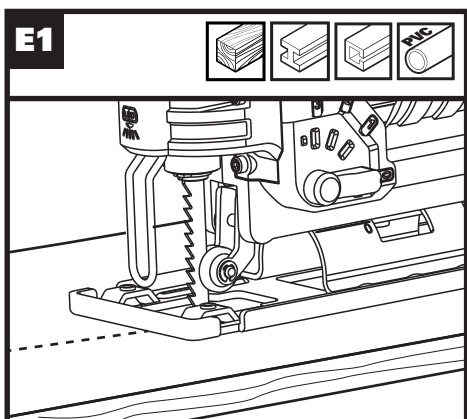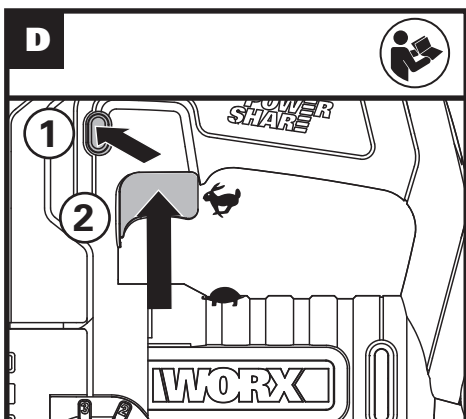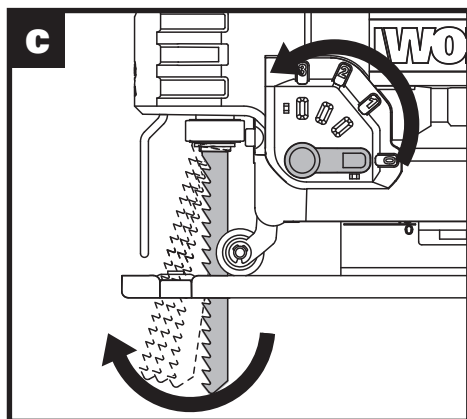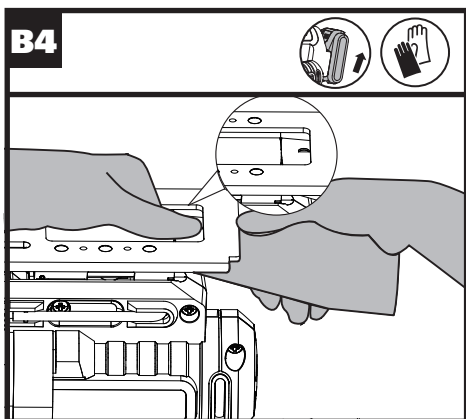

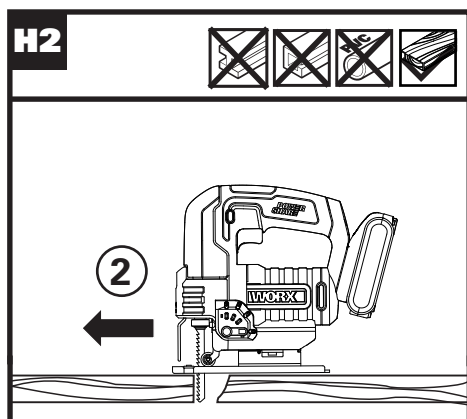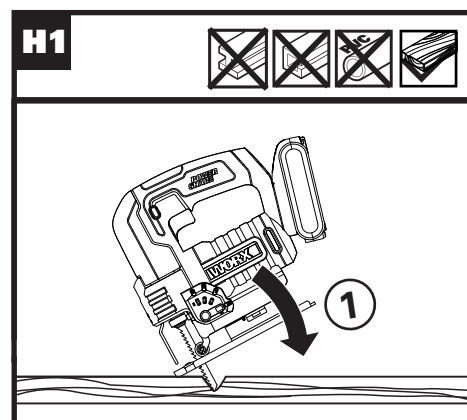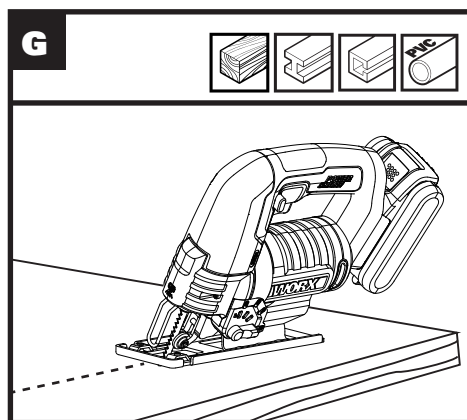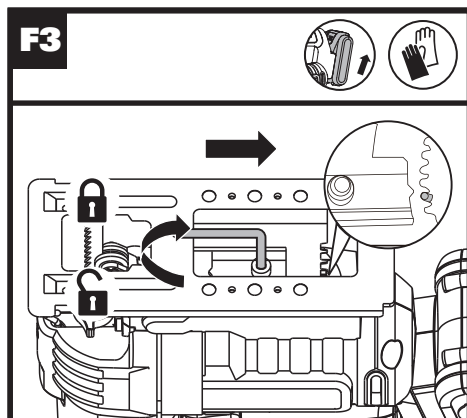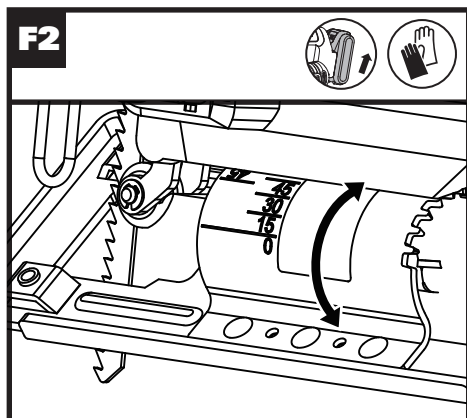

PRODUCT SAFETY

GENERAL POWER TOOL

SAFETY WARNINGS

 **WARNING** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of**

drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal

protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.

Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

h) Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

4) Power tool use and care

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any

other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- f) Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Battery tool use and care

- a) Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
 - b) Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
 - c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
 - d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
 - e) Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
 - f) Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
 - g) Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.
- #### **6) Service**
- a) Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
 - b) Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

JIGSAW SAFETY WARNINGS

- 1. Hold Jigsaw by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.** Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- 2. Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body leaves it unstable and may lead to loss of control.

SAFETY WARNINGS FOR BATTERY PACK

- a) Do not dismantle, open or shred cells or battery pack.**
- b) Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- c) Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) Do not subject battery pack to mechanical shock.**
- e) In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) Seek medical advice immediately if a cell or battery pack has been swallowed.**
- g) Keep battery pack clean and dry.**
- h) Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- i) Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- j) Do not maintain battery pack on charge when not in use.**
- k) After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- l) Battery pack gives its best performance when it is operated at normal room temperature (20 °C ± 5 °C).**
- m) When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.**
- n) Recharge only with the charger specified by WORX. Do not use any charger other than that specifically provided for use with the equipment.** A charger that is suitable for one type of battery pack may create a risk of fire when used

with another battery pack.

- o) Do not use any battery pack which is not designed for use with the equipment.**
- p) Keep battery pack out of the reach of children.**
- q) Retain the original product literature for future reference.**
- r) Remove the battery from the equipment when not in use.**
- s) Dispose of properly.**
- t) Do not mix cells of different manufacture, capacity, size or type within a device.**
- u) Do not remove battery pack from its original packaging until required for use.**
- v) Observe the plus (+) and minus (-) marks on the battery and ensure correct use.**

SYMBOLS

	To reduce the risk of injury, user must read instruction manual
	Warning
	Wear ear protection
	Wear eye protection
	Wear dust mask
	Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.
	Do not burn
 Li-Ion  Li-Ion	Li-Ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.

	Make sure the battery is removed prior to changing accessories.
	Wear protective gloves
	Wood
	Metal
	Aluminum
	Plastic
	Incorrect
	Correct
	High speed
	Low speed
	Lock
	Unlock

COMPONENT LIST

1. LOCK-OFF BUTTON
2. ON/OFF SWITCH
3. BATTERY PACK RELEASE BUTTON *
4. BATTERY PACK *
5. PENDULUM ACTION CONTROL LEVER
6. VACUUM ADAPTER
7. BASE PLATE
8. ROLLER GUIDE
9. SAW BLADE
10. CONTACT PROTECTOR
11. TOOL-FREE BLADE HOLDER
12. LED LIGHT
13. HEX KEY

* Not all the accessories illustrated or described are included in standard delivery.

TECHNICAL DATA

Type Designation **WX543 WX543.2**
WX543.9 (540-559 - designation of
machinery, representative of Jig Saw)

	WX543	WX543.2	WX543.9
Voltage	20V  Max**		
No load speed	0-2600r/min		
Stroke length	24mm		
Cutting capacity			
Wood	80mm		
Aluminum	18mm		
Steel	8mm		
Bevel capacity	±45°		
Weight	2.1kg		1.7kg

** Voltage measured without workload. Initial battery voltage reaches maximum of 20 volts. Nominal voltage is 18 volts.

ACCESSORIES

	WX543	WX543.2	WX543.9
Charger (WA3860)	1	1	/
Battery pack (WA3551.1)	1	1	/
Wood cutting blade	1	1	1
Vacuum adapter	1	1	1
Hex key	1	1	1
10pcs Jigsaw blade kit (WA8105)	/	1	/

We recommend that you purchase your accessories listed in the above list from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

INTENDED USE

The machine is intended for sawing wood, plastic, metal and building materials while resting firmly on the workpiece. It is suitable for straight and curved cuts. The saw blade recommendations are to be observed.

ASSEMBLY AND OPERATION

ACTION	FIGURE
BEFORE OPERATION	
Removing the battery pack	See Fig. A1
Charging the battery	See Fig. A2
Installing the battery pack	See Fig. A3
ASSEMBLY	
Blade Installation NOTE: Ensure the blade is installed in place. The black line on the blade needs to be totally inserted into the tool-free blade holder.	See Fig. B1

Blade Removal NOTE: Hold the blade with one hand when remove the blade.	See Fig. B2
Vacuum Adapter Installation	See Fig. B3
Vacuum Adapter Removal NOTE: Press and hold the projection on the bottom of the vacuum adapter before pulling it out of the machine.	See Fig. B4
OPERATION	
Pendulum Function	See Fig. C
Safety On/Off Switch NOTE: For safety reasons the On/Off switch of the machine cannot be locked; it must remain pressed during the entire operation. Increasing or reducing the pressure on the On/Off switch enables stepless stroke-rate control of the switched-on machine.	See Fig. D
Straight Cut and Curve Cut	See Fig. E1, E2
Bevel Cut NOTE: Remove the vacuum adapter before adjust the base plate. NOTE: Rotate the base plate to the desired position according to the scale. Ensure the blade is engaged between the blade positioning wheel.	See Fig. F, G
Plunge Cut	See Fig. H

WORKING HINTS FOR YOUR JIGSAW

If your power tool becomes too hot, please run your jigsaw no load for 2-3 minutes to cool the motor. Avoid prolonged usage at very low speeds.

Always use a blade suited to the material and material thickness to be cut. For tight curves it is best to use a narrow saw blade. When sawing metal or similar materials, apply coolant/lubricant alongside the cutting line.

Always ensure the workpiece is firmly held or clamped to prevent movement. Any movement of the material may affect the quality of the cut. The blade cuts on the upward stroke and may chip the uppermost. Ensure your uppermost surface is a non-visible surface when your work is finished.

For easier control, use low speed to start cutting and then increase to correct speed.

In order to avoid operation malfunctions, do not saw gypsum board from below or overhead.

The guide roller should occasionally be checked for wear and lubricated with a drop of oil. If it is worn, it must be replaced.

MAINTENANCE

Remove the battery pack from the tool before carrying out any adjustment, servicing or maintenance.

There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

FOR BATTERY TOOLS

The ambient temperature range for tool and battery use and storage is 0°C -45°C.

The recommended ambient temperature range for the charging system during charging is 0°C -40°C.

TROUBLESHOOTING

Symptom	Possible Causes	Possible Solution
The tool suddenly stops during operation.	Overload Battery temperature too high Low battery capacity	Relieve the load on the machine immediately and allow cooling for approx. 30 seconds by running the machine on no-load. Charge the battery pack.

ENVIRONMENTAL PROTECTION



Disposal

The machine, its accessories and packaging materials should be sorted for environmentally friendly recycling.

The plastic components are labeled for categorized recycling.

הקל העומס על המכונה באופן מידי ואפשר קירור ל- 30 שניות על ידי הפעלת המכונה ללא עומס. לטעון את הסוללה.	עומס יתר טמפרטורות הסוללה גבוהה מדי קיבולת סוללה נמוכה	הכלי מפסיק פתאום במהלך המבצע.
---	--	-------------------------------

כלי הסוללה

טווח הטמפרטורה המקיפה לכלי, שימוש בסוללה ואחסון הוא 0°C-45°C.

טווח הטמפרטורה המומלץ לטעינת מערכת הטעינה הוא 0°C-40°C.

הגנה על הסביבה סילוק מכשיר ישן

יש למיין את המכונה, את האביזרים ואת חומרי האריזה לצורך מחזור ידיוותי לסביבה. חלקי הפלסטיק מסומנים בהתאם לתקנות מחזור בינלאומיות.



ראו איור D	נצרת הדק הפעלה/כיבוי הערה: מטעמי בטיחות, לא ניתן לנעול את מתג ההפעלה/כיבוי של המכשיר. יש להחזיקו לחוץ במהלך ההפעלה כולה. הגברה או הפחתה של הלחץ על מתג ההפעלה/כיבוי מאפשרות שליטה רציפה בקצב הניסור כאשר המכשיר פועל.
ראו איור E1, E2	חיתוך ישר וחיתוך מעוקל
ראו איור F, G	חיתוך בשיפוע הערה: הסר את מתאם הוואקום לפני להתאים את בסיס הצלחת. הערה: סובב את בסיס הצלחת למיקום הרצוי על פי קנה המידה. וודא הלהב עוסק בין גלגל מיקום הלהב.
ראו איור H	חיתוך בהטיה

טיפים לעבודה עם המסור

כשכלי העבודה החשמלי מתלהט, הפעילו אותו במהירות מקסימלית במשך 2-3 דקות ללא עומס, על מנת לאפשר למנוע להתקרר. הימנע משימוש ממושך במהירויות אטיות מאד. יש להשתמש תמיד בלהב המתאים לחומר החיתוך ולעובי החומר. לקימורים חדים מומלץ להשתמש בלהב מסור צר. בעת ניסור מתכת או חומרים דומים, יש למרוח נוזל קירור/חומר סיכה בצדי קו החיתוך.

ודאו תמיד שמשטח העבודה מהודק או מוחזק היטב למניעת תזוזה.

כל תזוזה של החומר עלולה להשפיע על איכות החיתוך. הלהב חותך במהלך כלפי מעלה ועלול לגרד את פני השטח העליונים. בסיום העבודה, ודא שפני השטח העליונים חלקים. לשליטה קלה יותר במכשיר, יש להשתמש במהירות נמוכה בתחילת החיתוך, ולאחר מכן להגביר למהירות המתאימה. אין לנסר לחות גבש מלמטה או מלמעלה כדי להימנע מכשלים בהפעלה.

מפעם לפעם יש לבדוק בלאי בגליל המוביל, ולשמן אותו בטיפת שמן. יש להחליף את הגליל המוביל אם הוא נשחק.

תחזוקה

נתקו את התקע מהשקע לפני ביצוע כיוונים, פעולות שרות או תחזוקה.

כלי העבודה החשמלי אינו כולל רכיבים הניתנים להחלפה ע"י המשתמש. לעולם אל תשתמשו במים או בחומרי ניקוי כימיים לניקוי הכלי. נקו את הכלי באמצעות מטלית יבשה.

אחסנו תמיד את כלי העבודה החשמלי במקום יבש. שמרו על ניקיון פתחי אוורור המנוע. שמרו על בקרי ההפעלה נקיים מאבק. כשגבל הזינה ניזוק יש להחליף ע"י היצרן או תחנת השרות הקרובה, למניעת סכנה.

מדי פעם אתה יכול לראות ניצוצות דרך חריצי האוורור. זה נורמלי ולא יפגע בכלי הכח שלך.

פותר בעיות.

תסמין	סיבות אפשריות	פתרון אפשרי
-------	---------------	-------------



שם החברה: סמיקום לקסיס בע"מ

כתובת: א"ת מערבי קדימה ת.ד. 9090 אבן יהודה

טלפון: 09-7611222

www.semicom.co.il

/	1	1	מטען(WA3860)
/	1	1	(WA3551.1) הסוללה
1	1	1	להב לחיתוך עץ
1	1	1	מתאם ואקום
1	1	1	מפתח הקסדצימלי
/	1	/	ערכת(WA8105) להב 10 יחידות

מומלץ שתרכשו את האביזרים מאותה חנות בה רכשתם את הכלי. עיינו בהוראות על גבי אריזת האביזר למידע נוסף. צוות החנות יכול לסייע ולייעץ לכם.

הוראות הפעלה

הערה:קראו בעיון רב את חוברת ההוראות לפני השימוש בכלי.



ייעוד השימוש
מכונה זו מיועדת לניסור עץ, פלסטיק, מתכת וחומרי בנייה כשהיא מוצמדת היטב לפריט לעיבוד. היא מתאימה לחתכים ישרים ועקו'מים . יש להקפיד על שימוש במסוריות המומלצות בלבד.

הלעפהו הבכרה

פעולה	איור
לפני השימוש במכשיר	ראו איור A1
הסרת הסוללה	ראו איור A2
טעינת הסוללה	ראו איור A3
הרכבה	
התקנת הלהב הערה: ודא הלהב מותקן במקום. הקו השחור על הלהב צריך להיות מוכנס לחלוטין לתוך מחזיק הלהב ללא כלי.	ראו איור B1
הסרת הלהב הערה: החזק את הלהב ביד אחת כאשר להסיר את הלהב.	ראו איור B2
התקנת מתאם הוואקום	ראו איור B3
הסרת מתאם ואקום הערה: תלחץ ותחזיק את ההקרנה בתחתית מתאם הוואקום לפני שתוציא אותו מהמכונה.	ראו איור B4
פעולות	
פונקציית מטוטלת	ראו איור C

- 1.לחצן נעילת מתג כיבוי
- 2.מתג הפעלה/כיבוי
- 3.לחצן שחרור הסוללה*
- 4.הסוללה*
- 5.בורר פעולת מטוטלת
- 6.מתאם ואקום
- 7..פלסטת בסיס
- 8.גלגלת נחיי
- 9.מסורית
- 10.מגן מעג
- 11.מחזיק להב ללא כלי
- 12.אור LED.
13. מפתח הקסדצימלי.

*חלק מהאביזרים המוצגים בחוברת זו או המתוארים בה הם אופציונליים וניתנים לרכישה בנפרד.

מפרט טכני

ייעוד סוג 559-540) WX543.2 WX543.9 WX543 - ייעוד מכונות, בציג ג'ג מסור)

WX543.9		
מתח נומינלי	עד *20V==	
מהירות סיבוב	0-2600 סל"ד	
אורך מהלך	24מ"מ	
עובי ניסור מרבי: עץ אלומיניום מתכת	80 ק"ג 18 ק"ג 8ק"ג	
זווית הטיה	±45°	
משקל נקי	1.7 ק"ג	2.1 ק"ג

**המתח נמדד ללא עומס. מתח הסוללה ההתחלתי מגיע עד . 20v המתח הנומינלי הוא . 18V

תכולת האריזה

WX543.9	WX543.2	WX543	
---------	---------	-------	--

לבשו כפפות מגן	
פלסטיק	
לא נכון	
נכון.	
אלומיניום	
מתכת	
מהירות נמוכה	
מהירות גבוהה	
עץ	
נעילה	
פתיחה	

WX543.2 WX543

חלקי המכשיר

טז) יש להרחיק את מארז הסוללות מהישג ידם של ילדים.
 יז) יש לשמור את מסמכי המוצר המקוריים לעיון בעתיד.
 יח) יש להוציא את הסוללה מהציוד כאשר אינו בשימוש.
 יט) יש להשליך כהלכה.
 כ) אין לערבב סוללות של ייצור, קיבולת, גודל או סוג שונים בהתקן.
 כא) אל הסייר את מארז הסוללות מהארזתו המקורית עד שיידרש.
 כב) שים לב לסימנים פלוס (+) ומינוס (-) על הסוללה כדי להבטיח שימוש נכון.

סמלים

על המשתמש לקרוא את חוברת ההוראות, להפחתת הסיכון בפציעה	
אזהרה	
לבשו מגני אוזניים	
לבשו מגני עיניים	
לבשו מסכת אבק	
סוללות עלולות להיכנס למחזור מים אם הן מושלכות שלא כראוי, זה שעלול להיות מסוכן למערכת האקולוגית. אל תיפטר מסוללות משומשות כפסולת עירונית לא ממוינת.	
אסור לשרוף	
סוללת ליתיום-יון. הסימול (מימין) על גבי המכשיר פירושו שאין להשליך את הסוללות ביחד עם האשפה הביתית. במקום זאת, יש להביאן לנקודת איסוף לצורך מחזורן או פירוקן באופן ידיוותי לסביבה. סוללות עלולות להיות מסוכנות לסביבה ולבריאות בני האדם היות והן מכילות חומרים מסוכנים.	 Li-Ion  Li-Ion
לפני החלפת אבזרים, יש לוודא שהסוללה הוצאה.	

נעים.

- ז. כשמוסקים מתאמים לחיבור שואב אבק יש לזרז שהם מותאמים היטב ומשתמשים בהם כראוי. שימוש בשואב אבק מקטין את הסיכונים הקשורים לאבק.
- ח. יש להימנע ממצב שבו היכרות עקב שימוש תכופ בכלים חוד ביל לשאנונות ולהתעלמות מעקרונות הבטיחות של הכלים. רשלנות עלולה לגרום לפציעה חמורה תוך שבריר שנייה.

4) שימוש ותחזוקה

- א. אל תפעילו כוח על כלי העבודה החשמלי. השתמשו בכלי העבודה החשמלי המתאים למשימה. כלי העבודה החשמלי המתאים יעשה את העבודה בצורה בטוחה וטובה יותר בקצב העבודה עבורו הוא מיועד.
- ב. אל תשתמשו בכלי העבודה החשמלי אם המתג אינו מפעיל או מכבה אותו. כל כלי עבודה חשמלי שאינו ניתן לשליטה באמצעות המתג הוא מסוכן ויש לתקנו.
- ג. נתקו את התקע ממקור המזון ו/או הביטחו את הסוללה מכלי העבודה החשמלי לפני ביצוע שירותים, החלפת אבזרים או אחסון. נקיטת אמצעי בטיחות כאלה מקטינה את הסיכון להפעלה בשוגג של כלי העבודה החשמלי.
- ד. אחסנו כלי עבודה חשמליים שאינם בשימוש הרחק מהישג ידם של ילדים ואל תאפשרו לאנשים שאינם בקיאים בהפעלת כלי העבודה החשמלי או בהוראות אלה להפעיל אותו. כלי עבודה חשמליים מהווים סכנה בידיהם של משתמשים לא מנוסים.
- ה. שמרו על כלי עבודה חשמליים תקינים. בדקו אחר חלקים עומים על או מכופפים, חלקים שבורים וכל נתני אחר העלול להשפיע על פעולת כלי העבודה החשמלי. דאגו לתיקון כלי עבודה חשמלי פגום לפני השימוש בו. תאונות רבות גורמות בשל שימוש בכלי עבודה חשמליים פגומים.
- ו. שמרו על כלי חיתוך חדים ונקיים. כלי חיתוך מתוחזקים כראוי עם קצוות חיתוך חדים נוטים פחות להתכופף וקלים יותר לשליטה.
- ז. השתמשו בכלי העבודה החשמלי, באבזרים בביטויים וכד' בהתאם להוראות אלה, תוך התחשבות בתנאי העבודה ובמאות העבודה לביצוע. שימוש בכלי העבודה החשמלי לכל מטרה אחרת מלבד לה הוא מיועד עלול להיות מסוכן.
- ח. יש לשמור על הידיות ועל משטחי האחיזה יבשים, נקיים וולא שמן או גרזי. ידיים ומשטחי אחיזה חלקלקים מונעים עבודה בטוחה ושליטה בכלי במצבים בלתי-צפויים.
- 5) שימוש בכלי עבודה מופעל סוללה ותחזוקתו
- א. טענו באמצעות המטען המסופק ע"י היצרן בלבד. מטען המ"תאים לסוג סוללה אחד עלול לגרום סכנת דליקה כשמשתמשים בו לטעינת סוללה מסוג אחר.
- ב. השתמשו בכלי העבודה עם סוללות המיועדות לו בלבד. שימוש בסוללות אחרות עלול לגרום סכנת פציעה או דליקה.
- ג. הרחיקו את הסוללה, כשאינה בשימוש, מחפצים מתכתיים אחרים כגון אטבי נייר, מטבעות, מפתחות, מסמרים, ברגים או חפצים מתכתיים קטנים אחרים, העלולים ליצור מגע בין שני קוטבי הסוללה. קיצור קוטבי הסוללה יחדיו עלול לגרום כוויות או דליקה.
- ד. בתנאי שימוש קיצוניים נוזל הסוללה עלול לדלוף ממנה; הימנעו ממגע. שטפו מיד במים במקרה של מגע בשוגג. בנוסף, פנו לקבלת סיוע רפואי במקרה של מגע עם העיניים. הנוזל הדולף מהסוללה עלול לגרום גירוי או כוויות.
- ה. אל השתמשו במארז סוללות או בכלי שנפגע או שעבר שינויים. סוללות אשר נפגמו או עברו שינויים עלולות לגרום להתנהגות בלתי-צפויה אשר תוביל לשריפה, להתפוצצות או לסכנת פציעה.
- ו. אל לחשוף מארז סוללות או כלי לאש או לטמפרטורה חרי"גה. חשיפה לאש או לטמפרטורה מעל 130°C עלולה לגרום התפוצצות.
- ז. יש להקפיד על כל הוראות הטעינה. אין לטעון את מארז

הסוללות או הכלי בטמפרטורה החורגת מהטווח המצוין בהוראות. טעינה שגויה או טעינה מחוץ לטווח הטמפרטורה המצוין עלולה להזיק לסוללה ולהגביר את הסיכון לשריפה.

6) שירות


- א. על השירות לכלי העבודה החשמלי להינתן ע"י טכנאי מוסמך המשתמש בחלקי חילוף מקוריים. דבר זה יבטיח שבטיחות כלי העבודה החשמלי תישמר.
- ב. אין לנסות לתקן מארזי סוללות פגומים. רק היצרן או ספקי שירות מוסמכים רשאים לטפל במארזי סוללות.

אזהרות בטיחות פאזל

1. אחזו בכלי העבודה החשמלי במשטחי האחיזה המבודדים בלבד, בעת ביצוע פעולת עיבוד בה אביזר החיתוך עלול לבוא במגע עם חיווט נסתר. אביזר חיתוך הנוגע בגיד "חי" עלול להפוך את חלקי המתכת החשופים של כלי העבודה החשמלי ל"חיים" ולגרום להתחשמלות המפעיל.
2. השתמש במצברים או בדרך מעשית אחרת להבטחת ותמיכה של חומר העבודה לרציף יציב. החזקת העבודה ביד או כנגד גוףך משאירה אותה לא יציבה ועלולה להוביל לאובדן שליטה.

הוראות בטיחות לסוללה

- א) אין לפרק, לפתוח או לגרום את הסוללות או מארז הסוללות.
- ב) אין לקצר את מארז הסוללות. אין לאחסן מארזי סוללות באופן מסוכן בקופסה או במגירה שבה הם עלולים לקצר זה את זה או שחומרים מוליכים עלולים לקצר אותם. כאשר מארז הסוללות אינו בשימוש, יש להרחיק אותו מעצמים מתכתיים אחרים, כגון מהדקי נייר, מטבעות, מפתחות, מסמרים, ברגים או עצמים מתכתיים קטנים אחרים, העלולים ליצור חיבור מדהק אחד לאחר. קיצור הדקי סוללות עלול לגרום כוויות או שריפה.
- ג) אין לחשוף את מארז הסוללות לחום או לאש. הימנעו מאחסון במקום חשוף לאור שמש ישיר.
- ד) יש למנוע פגיעה פיזית במארז הסוללות.
- ה) במקרה של דליפת סוללה, אין לאפשר מגע של הנוזלים עם העור או העיניים. במקרה של מגע, יש לטשטש את האזור הנגוע בממויות גדולות של מים ולפנות לטיפול רפואי.
- ו) יש לפנות מיד לטיפול רפואי במקרה של בליעת סוללה או מארז סוללות.
- ז) יש לשמור את מארז הסוללות נקי ויבש.
- ח) אם הדקי מארז הסוללות מתכלכים, יש לנקותם במטלית יבשה ונקייה.
- ט) יש לטעון את מארז הסוללות לפני השימוש. יש להקפיד תמיד על הוראות אלה ולהשתמש בהליך הטעינה הנכון.
- י) אין להשאיר את מארז הסוללות בטעינה כאשר אינו בשימוש.
- יא) לאחר תקופות ממושכות של אחסון, ייתכן שיהיה צורך לטעון ולפרוק את מארז הסוללות כמה פעמים להשגת ביצועים מרביים.
- יב) מארז הסוללות מספק ביצועים מיטביים כאשר הוא פועל בטמפרטורת החדר הרגילה (5°C ± 20°C).
- יג) בעת השלכה של מארזי סוללות, יש להפריד זה מזה מארזי סוללות הפועלים בשכבות אלקטרו-כימיות שונות.
- יד) יש לטעון מחדש רק באמצעות המטען המצוין על-ידי WORX. אין להשתמש בשום מטען מלבד המטען המסופק במיוחד לשימוש עם הציוד. מטען המתאים למארז סוללות מסוג מסוים עלול ליצור סכנת שריפה בעת השימוש בו עם מארז סוללות אחר.
- טו) אין להשתמש במארז סוללות שלא נועד לשימוש עם הציוד.

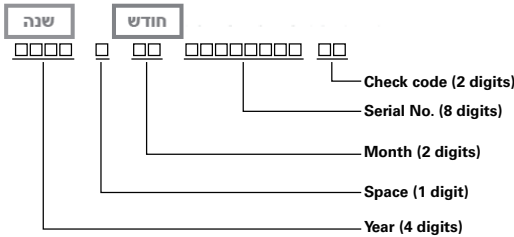

דוגמא



על הקוד המופיע על גוף הכלי מצויינים
השנה והחודש, לדוגמא במדבקה המצ"ב:
יוני, 2019

הוראות בטיחות כלליות לכלי עבודה חשמליים

⚠ אזהרה: יש לקרוא את כל אזהרות הבטיחות, ההוראות, האיומים והמפרטים המצורפים לכלי עבודה זה. למניעת התחשמלות, דליקה ו/או פציעה.

שמרו את החוברת במקום בטוח, לעיון בעתיד. המונח "כלי עבודה חשמלי" באזהרות מתייחס לכלי עבודה מופעל חשמל (חוטי) או כלי עבודה מופעל סוללה (אלחוטי).

- 1) בטיחות באזור העבודה
 - א. שמרו על אזור עבודה נקי ובאזורים מלוכלכים או חשוכים מזמינים תאונות.
 - ב. אל תפעילו כלי עבודה חשמליים בסביבות נפיצות, כגון בקרבת נוזלים דליקים, גזים או אבק. כלי עבודה חשמליים יוצרים ניצוצות העלולים להצית חלקיקי אבק או אדים.
 - ג. הרחיקו ילדים ואנשים אחרים בעת הפעלת כלי עבודה חשמלי. הסחות דעת עלולות לגרום לכם לאבד שליטה.

- 2) בטיחות חשמלית
 - א. על תקע כלי העבודה החשמליים להתאים לשקעים החשמליים. לעולם אל תשנו את התקע בכל צורה שהיא. אל תשתמשו במתאמי תקעים כלשהם לחיבור כלי עבודה חשמליים מוארקים. תקעים תקנים ושקעים חשמליים תואמים מקטינים את הסיכון להתחשמלות.
 - ב. הימנעו ממגע עם משטחים מוארקים, כגון צינורות, דריסטורים, תנורי בישול ומקררים. הסיכון להתחשמלות גדל כשגופכם מוארק.
 - ג. אל תחשפו את כלי העבודה החשמליים לגשם או לחוות. חדירת מים לכלי העבודה החשמלי מגדילה את הסיכון להתחשמלות.

- ד. אל תפעילו כוח על כבל הזינה. לעולם אל תשתמשו בכבל לנשיאת הכלי או לניתוקו מהשקע החשמלי. הרחיקו את הכבל מחום, משמן, מקצוות חדים או מחלקים נעים. כבלים פגומים או מפותלים מגדילים את הסיכון להתחשמלות.
- ה. השתמשו בכבל מאריך המתאים לשימוש מחוץ למבנה בעת הפעלת כלי עבודה חשמלי מחוץ למבנה. שימוש בכבל המי תאים לשימוש מחוץ למבנה מקטין את הסיכון להתחשמלות.
- ו. השתמשו במפסק פחת כשלא ניתן להימנע מהפעלת כלי עבודה חשמלי בסביבה לחה. השימוש במפסק פחת מקטין את הסיכון להתחשמלות.

- 3) בטיחות אישית
 - א. היו ערים, שימו לב למה שאתם עושים ונהגו בהיגיון בעת הפעלת כלי עבודה חשמלי. אל תשתמשו בכלי עבודה חשמלי כשאתם עייפים או תחת השפעת כדורים, אלכוהול או תרופות. רגע של חוסר תשומת לב בעת הפעלת כלי עבודה חשמליים עלול לגרום פציעה חמורה.
 - ב. השתמשו בצידוד מגן אישי. לבשו תמיד משקפי מגן. שימוש בצידוד מגן אישי כגון מסכת אבק, נעלי בטיחות מוגנות החלקה, קסדה או מגני אוזניים מקטין את הסיכון לפציעה.
 - ג. חיבור הכלי למקור מתח ו/או סוללה, הרמת הכלי או נשיאתו. נשיאת כלי עבודה חשמליים כשהאצבע על המתג או חיבורם לשקע כשהמתג במצב פעולה מזמינים תאונות.
 - ד. הסיר מפתחות כוונן או מפתחות ברגים לפני הפעלת כלי העבודה החשמלי. מפתח ברגים או מפתח כוונן המחובר לחלק מסתובב של כלי העבודה החשמלי עלול לגרום פציעה.
 - ה. אל תתמחתו על מנת להגיע למקומות מרוחקים. שמרו תמיד על עמידה יציבה. דבר זה מאפשר שליטה טובה יותר בכלי העבודה החשמלי במצבים בלתי צפויים.
 - ו. התלבשו בהתאם. אל תלבשו בגדים רפויים או תכשיטים. יש להקפיד על מרחק בין השיער והבגדים לבין חלקים נעים. בגדי דים רפויים, תכשיטים או שיער ארוך עלולים להיתפס בחלקים



www.worx.com

Copyright © 2020, Positec. All Rights Reserved.
AR01493801